


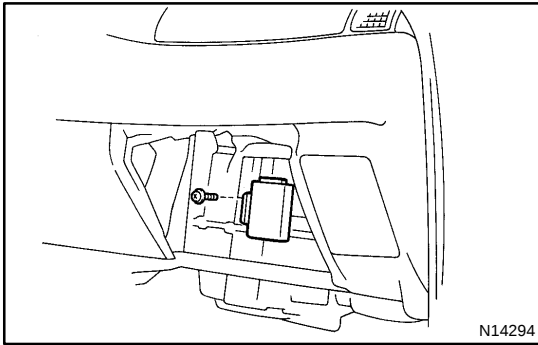

REMOVAL

1. **REMOVE GLOVE COMPARTMENT DOOR**
(See page [BO-76](#))
2. **REMOVE A/C AMPLIFIER**
 - (a) Disconnect the connector from the amplifier.
 - (b) Remove the screw and the amplifier.