


BLOWER RESISTOR INSPECTION


AC3JO-01

1. REMOVE GLOVE COMPARTMENT DOOR (See page [BO-76](#))

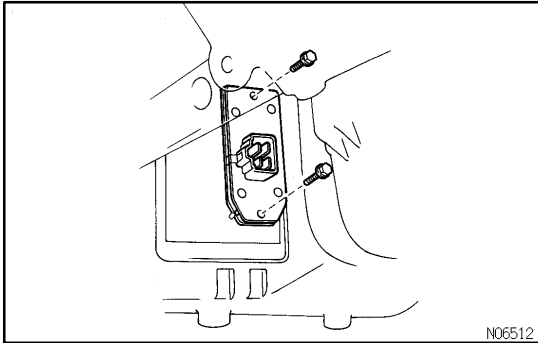

2. REMOVE BLOWER RESISTOR

Disconnect the connector and remove the 2 screws and blower resistor.

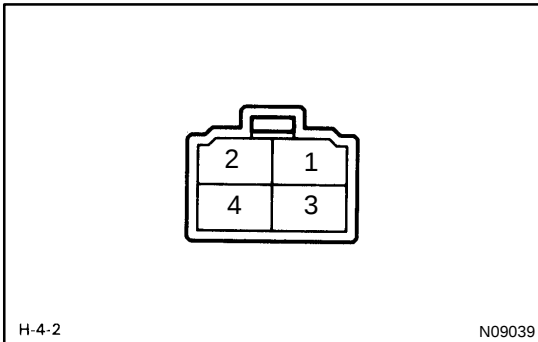

3. INSPECT BLOWER RESISTOR RESISTANCE

Measure resistance between terminals 1 and 4.

Standard resistance: 1.8 - 2.2 Ω

If resistance is not as specified, replace the blower resistor.

4. REINSTALL BLOWER RESISTOR