


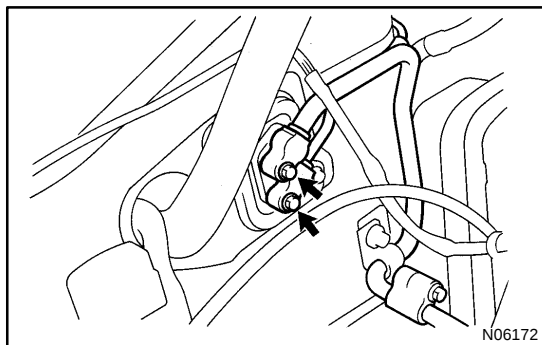

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, refer to the following procedure.

- Evacuate air from refrigeration system.
- Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount:

850 ± 50 g (29.98 ± 1.76 oz.)

2. DISCONNECT SUCTION TUBE AND LIQUID TUBE FROM COOLING UNIT FITTING

Remove the 2 bolts and both tubes.


Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

HINT:

At the time of installation, lubricate 2 new O-rings with compressor oil and install the tubes.

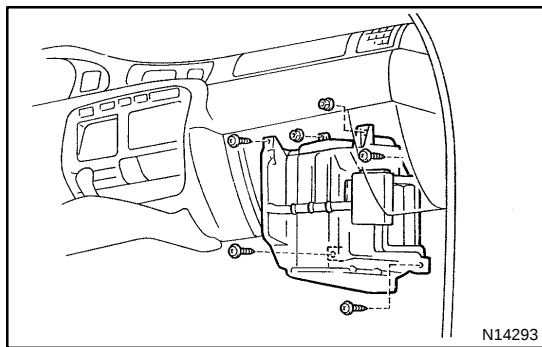

3. REMOVE THESE PARTS:

- Glove compartment door (See page [BO-76](#))
- Glove compartment door reinforcement (See page [BO-76](#))

4. REMOVE COOLING UNIT

- Disconnect the connectors.
- Remove the 4 screws, 2 nuts and cooling unit.