



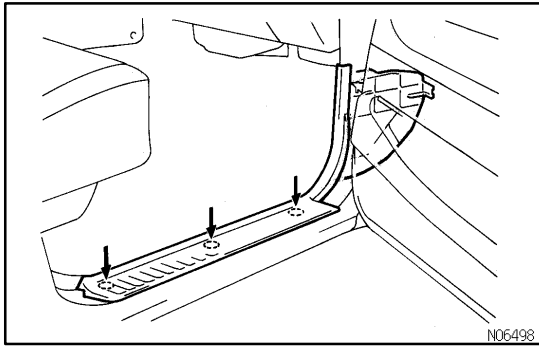

FRONT BLOWER MOTOR REMOVAL


AC3JN-01

1. REMOVE RH SCUFF PLATE

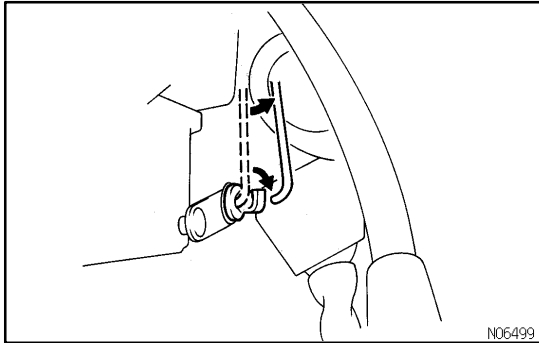

2. REMOVE BLOWER MOTOR

(a) Disconnect the link from the lower cover.

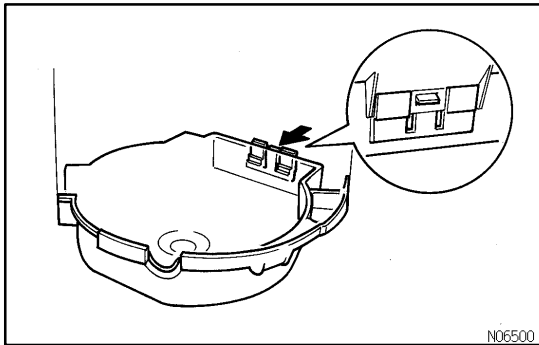

(b) Remove the 2 screws, then remove the lower cover while pushing the locking protrusion, as shown.

(c) Disconnect the connector from the blower motor.

(d) Remove the 3 screws and blower motor.