


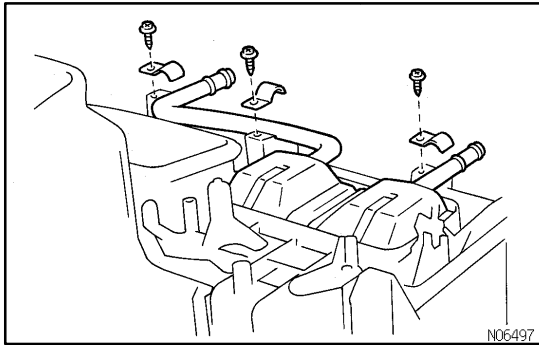

HEATER RADIATOR INSPECTION

AC3JM-01

1. REMOVE HEATER UNIT (See page [AC-28](#))

2. REMOVE HEATER RADIATOR

(a) Remove the screws and plates.

(b) Pull the heater radiator out.

3. INSPECT FINS FOR BLOCKAGE

If the fins are clogged, clean them with compressed air.

4. INSTALL HEATER RADIATOR