


HEATER UNIT REMOVAL

AC2QS-01

1. REMOVE COOLING UNIT (See page [AC-24](#))
2. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all the coolant.

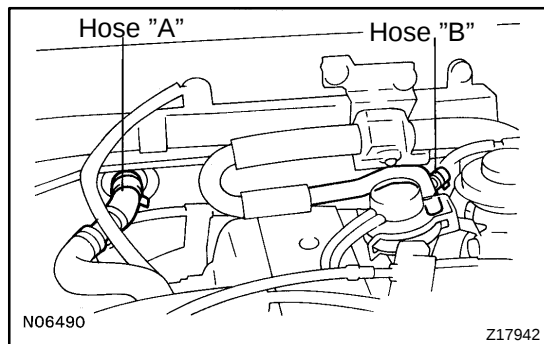


3. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

- (a) Grip the claws of the hose clip with pliers and slide the clip along the hose to a place where it does not clamp the hose to the pipe.
- (b) Disconnect the water hoses.

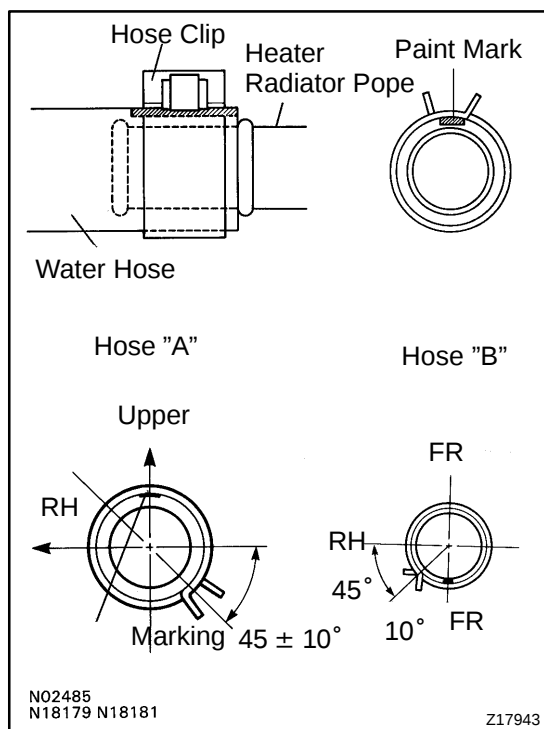


HINT:

- Push the water hose onto the heater radiator pipe as far as the ridge on the pipe.
 - Install the hose clip in a position, as shown in the illustration.
4. REMOVE PIPE GROMMETS
 5. REMOVE INSTRUMENT PANEL SAFETY PAD (See page [BO-76](#))
 6. REMOVE INSTRUMENT PANEL REINFORCEMENT (See page [BO-76](#))

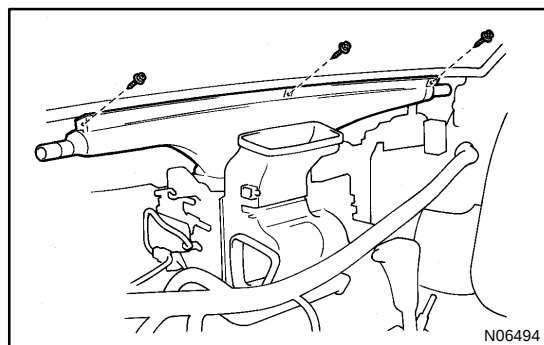

7. REMOVE HEATER UNIT

- (a) Remove the 3 screws and defroster nozzle.

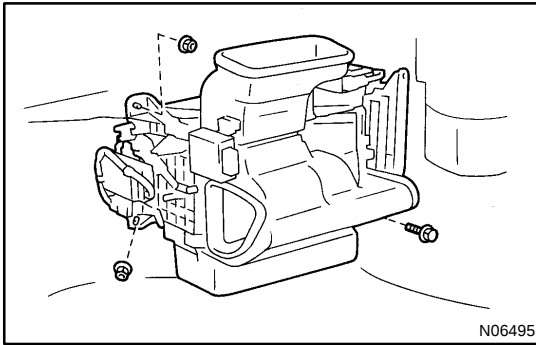

- (b) Remove the 2 nuts and a screw, then remove heater unit.