



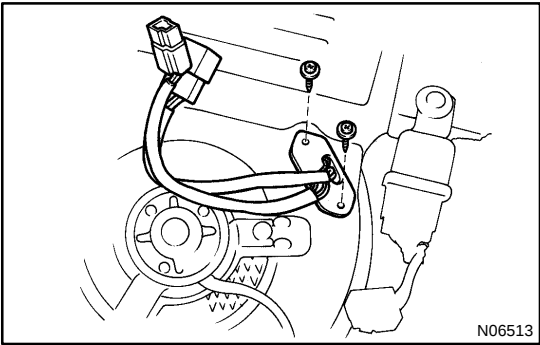

REAR BLOWER RESISTOR INSPECTION

AC3JP-01

- 1. REMOVE FRONT SEAT RH
- 2. REMOVE BLOWER RESISTOR
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws and blower resistor.

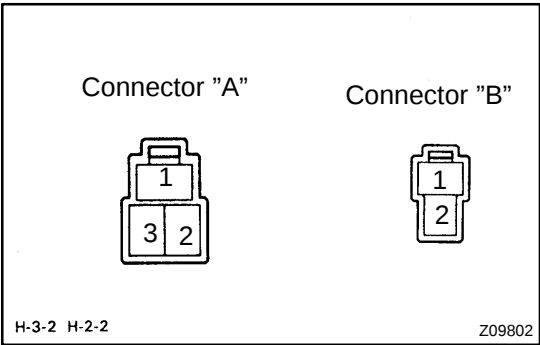

3. INSPECT REAR BLOWER RESISTOR CONTINUITY

Condition	Tester connection	Specified condition
Constant	A1 - B1 A2 - A3 - B2	Continuity

If continuity is not as specified, replace the blower resistor.

4. REINSTALL REAR BLOWER RESISTOR