

WATER VALVE REMOVAL


AC2RU-01

1. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:


It is not necessary to drain out all the coolant.

2. DISCONNECT WATER VALVE CONTROL CABLE

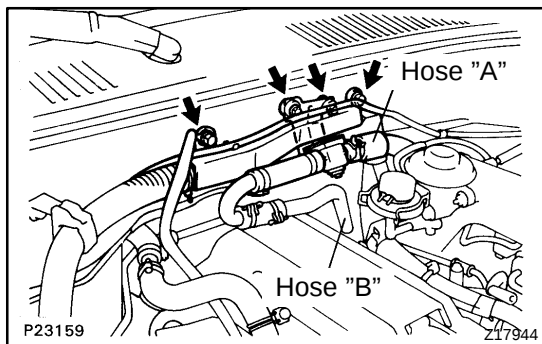

3. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPE AND WATER VALVE

- (a) Grip the claws of the hose clip with pliers and slide the clip along the hose to a place where it does not clamp the hose to the pipe.
- (b) Disconnect the water hoses.

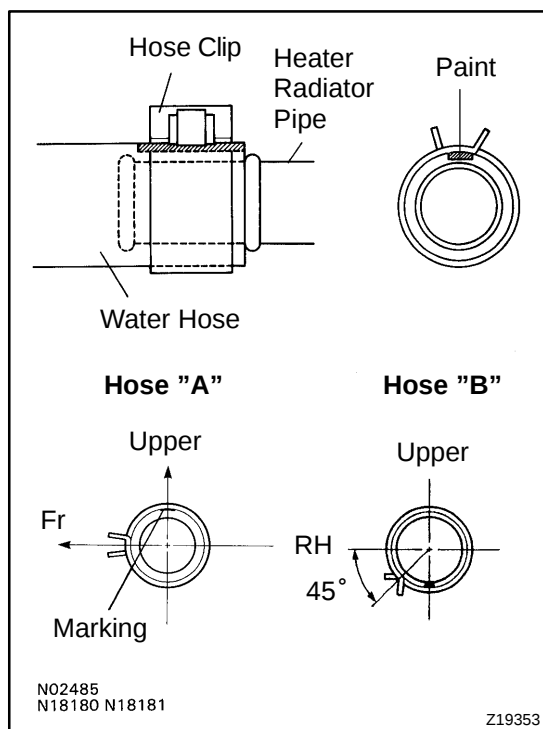

HINT:

At the time of installation, refer to the following procedure.

- Push the water hose onto the heater radiator pipe as far as ridge on the pipe.
- Install the hose clip in a position, as shown in the illustration.

4. REMOVE WIRE HARNESS PROTECTOR

5. REMOVE WATER VALVE

Remove the 2 bolts and water valve.