


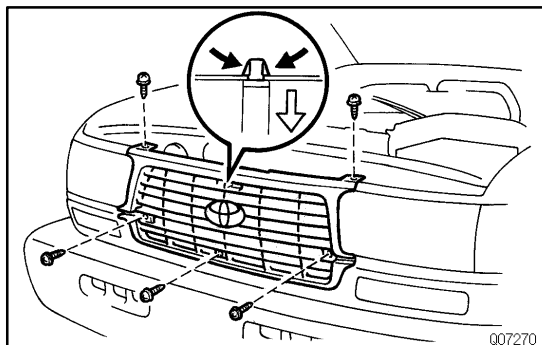

## REMOVAL


### 1. REMOVE RADIATOR GRILLE

- (a) Remove the 5 screws.
- (b) Using a screwdriver, disconnect the clip.

#### HINT:


Tape a screwdriver tip before use.

- (c) Remove the radiator grille.

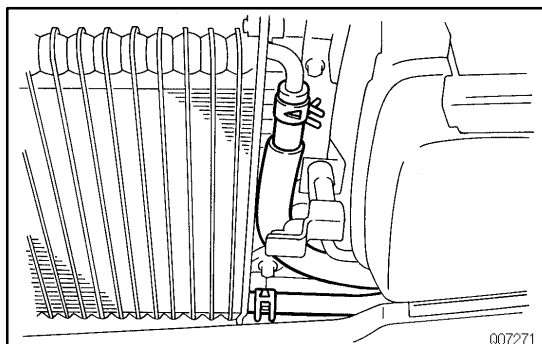

### 2. REMOVE OIL COOLER

- (a) Loosen the 2 clips and disconnect the 2 hoses.

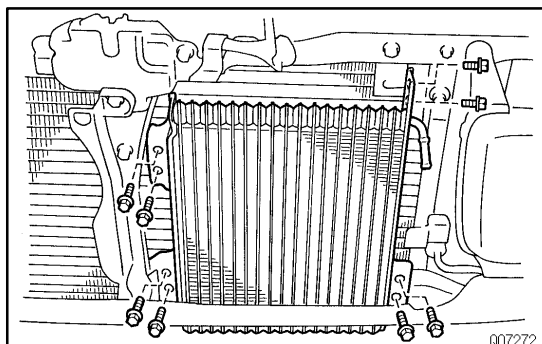

- (b) Remove the 8 bolts and oil cooler.  
**Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)**