

AUTOMATIC TRANSMISSION SYSTEM

AT0SY-02

PRECAUTION

When working with FIPG material, you must observe the followings.

- Using a razor blade and a gasket scraper, remove all the old FIPG material from the gasket surfaces.
- Thoroughly clean all components to remove all the loose material.
- Clean both sealing surfaces with a non-residue solvent.
- Apply FIPG in an approx. 1 mm (0.04 in.) wide bead along the sealing surface.
- Parts must be assembled within 10 minutes of application. Otherwise, the FIPG material must be removed and reapplied.

If the vehicle is equipped with a mobile communication system, refer to the precautions in the IN section.