


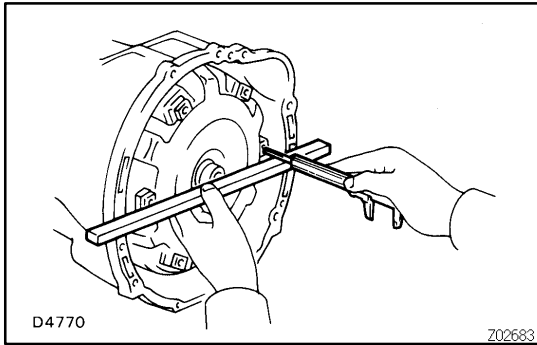

INSTALLATION

1. CHECK TORQUE CONVERTER CLUTCH INSTALLATION

Using calipers and a straight edge, measure from the installed surface of the transmission housing.

Correct distance: More than 15.7 mm (0.618 in.)

2. INSTALL TRANSMISSION

Installation is in the reverse order of removal (See page [AT-20](#)).

HINT:

- After installation, adjust the shift lever position and throttle cable (See page [DI-131](#)).
- Fill and check fluid level (See page [DI-131](#)).