



PARKING LOCK PAWL ON-VEHICLE REPAIR


1. REMOVE VALVE BODY (See page [AT-7](#))

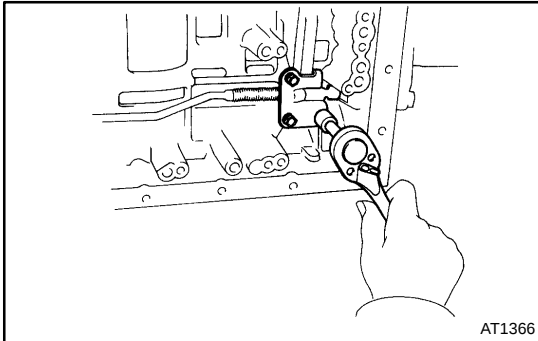

2. REMOVE PARKING LOCK PAWL BRACKET

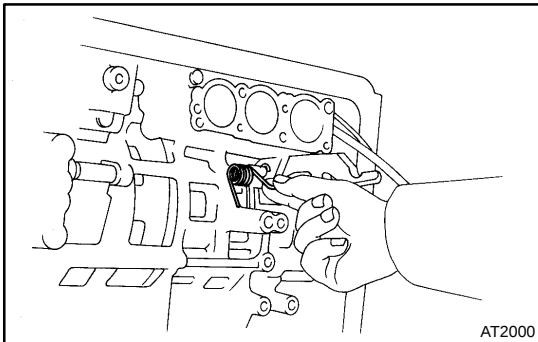

3. REMOVE SPRING FROM PARKING LOCK PAWL
SHAFT

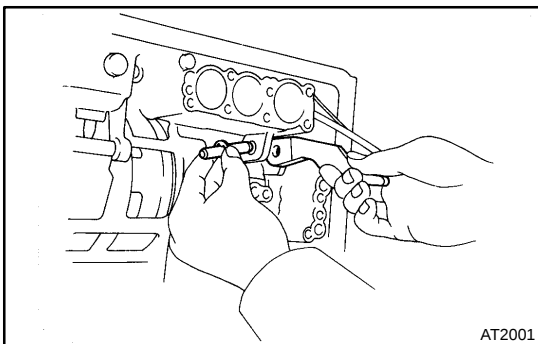

4. REMOVE PARKING LOCK PAWL AND SHAFT
5. REINSTALL PARKING LOCK PAWL AND SHAFT
6. REINSTALL SPRING
7. REINSTALL PARKING LOCK PAWL BRACKET

HINT:

- Push the lock rod fully forward.
- Check that the parking lock pawl operates smoothly.

Torque: 7.4 N·m (75 kgf·cm, 65 in·lbf)

8. REINSTALL VALVE BODY (See page [AT-7](#))