

THROTTLE CABLE ON-VEHICLE REPAIR

1. DISCONNECT THROTTLE CABLE

- (a) Disconnect the cable from the throttle linkage.
- (b) Disconnect the cable from the cable clamps in the engine compartment.
- (c) Remove the bolt and disconnect the cable clamp from the torque converter clutch housing.



2. REMOVE VALVE BODY (See page [AT-7](#))

3. REMOVE THROTTLE CABLE

Remove the retaining bolt and pull out the throttle cable.

4. REINSTALL THROTTLE CABLE

- (a) To install, follow the removal procedure in reverse.

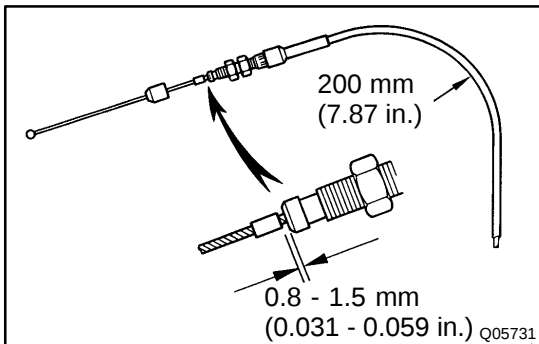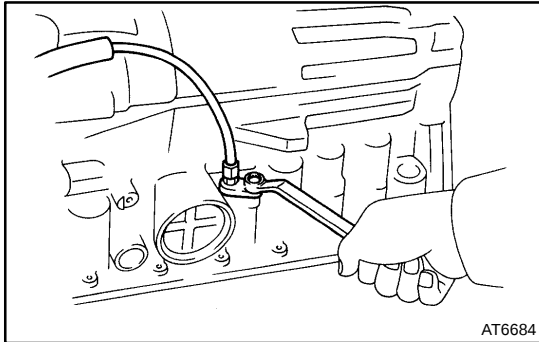

HINT:

If throttle cable is new, stake the stopper on the inner cable.

- (b) Bend the cable so there is a radius of about 200 mm (7.87 in.)
- (c) Pull the inner cable lightly until slight resistance is felt, and hold it there.
- (d) Stake the stopper, 0.8-1.5 mm (0.031-0.059 in.) from the end of outer cable.
 - After installation, fill ATF and check the fluid level (See page [DI-131](#)).
 - Adjust the throttle cable (See page [DI-131](#)).