


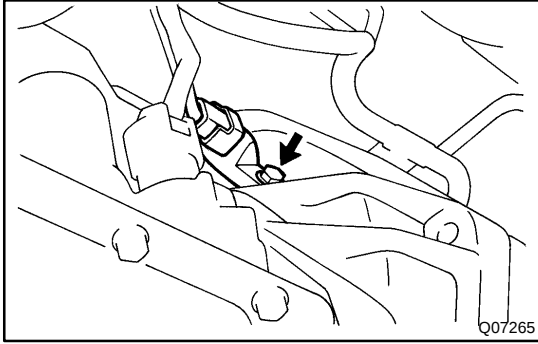

## VEHICLE SPEED SENSOR ON-VEHICLE REPAIR

ATOT1-01

1. **DISCONNECT NO.2 VEHICLE SPEED SENSOR CONNECTOR**
2. **REMOVE NO.2 VEHICLE SPEED SENSOR**
  - (a) Remove the bolt and No.2 vehicle speed sensor.
  - (b) Remove the O-ring from the No.2 vehicle speed sensor.
3. **REINSTALL NO.2 VEHICLE SPEED SENSOR**
  - (a) Coat a new O-ring with ATF and install it to the No.2 vehicle speed sensor.
  - (b) Install the No.2 vehicle speed sensor and torque the bolt.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**
4. **RECONNECT NO.2 VEHICLE SPEED SENSOR CONNECTOR**