


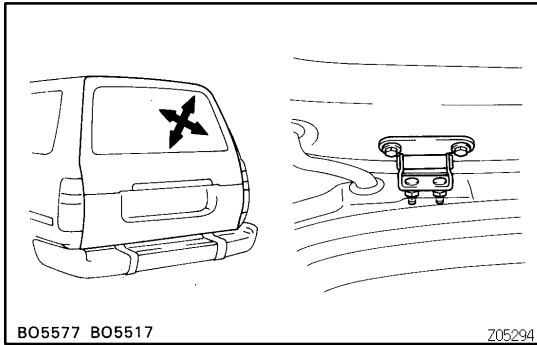


ADJUSTMENT


1. ADJUST UPPER BACK DOOR

- (a) Adjust the door in forward/rearward and left/right directions.


Adjust the door by loosening the door side hinge bolts.

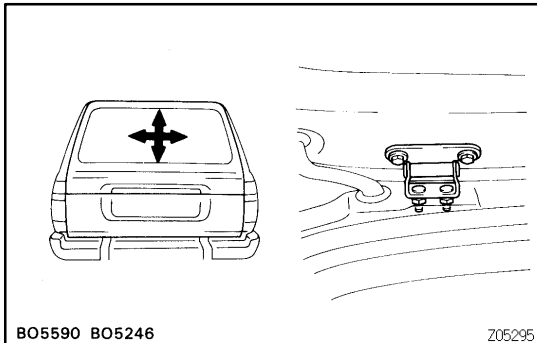

- (b) Adjust the door in left/right and vertical directions.
Adjust the door by loosening the body side hinge bolts.

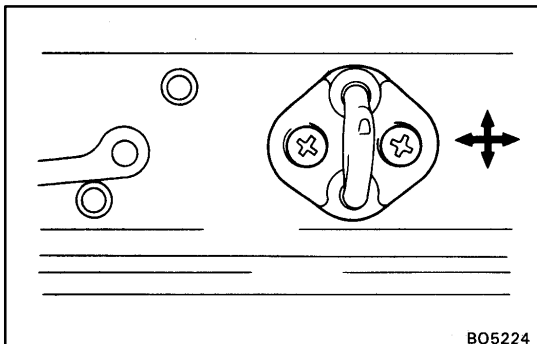


- (c) Adjust the door lock striker.
- (1) Check that the door fit and door lock linkage are adjusted correctly.
 - (2) Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a hammer. Tighten the striker mounting screw again.

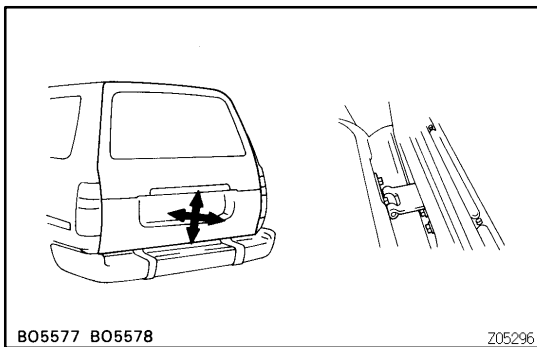


2. ADJUST LOWER BACK DOOR

- (a) Adjust the door in forward/rearward and left/right directions.

Adjust the door by loosening the door side hinge bolts.

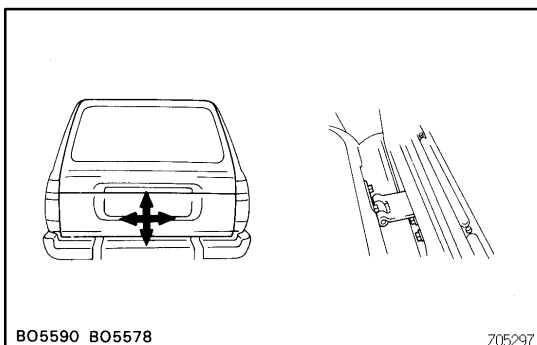

- (b) Adjust the door in left/right and vertical directions.
Adjust the door by loosening the body side hinge bolts.

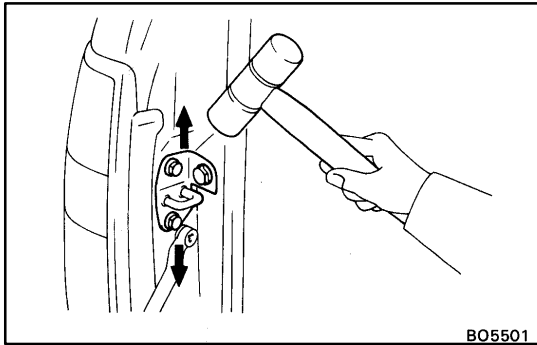

- (c) Adjust the door lock striker.
- (1) Check that the door fit and door lock linkages are adjusted correctly.
 - (2) Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a hammer.
 - (3) Tighten the striker mounting screws again.