
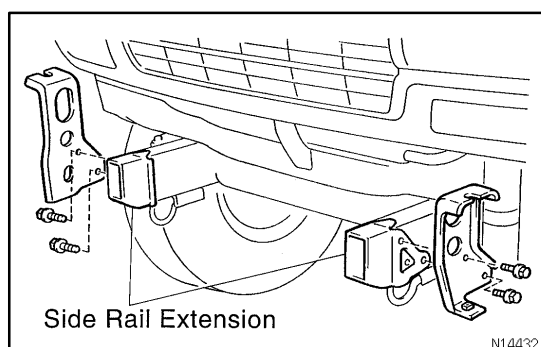


FRONT BUMPER COMPONENTS

BO37H-01

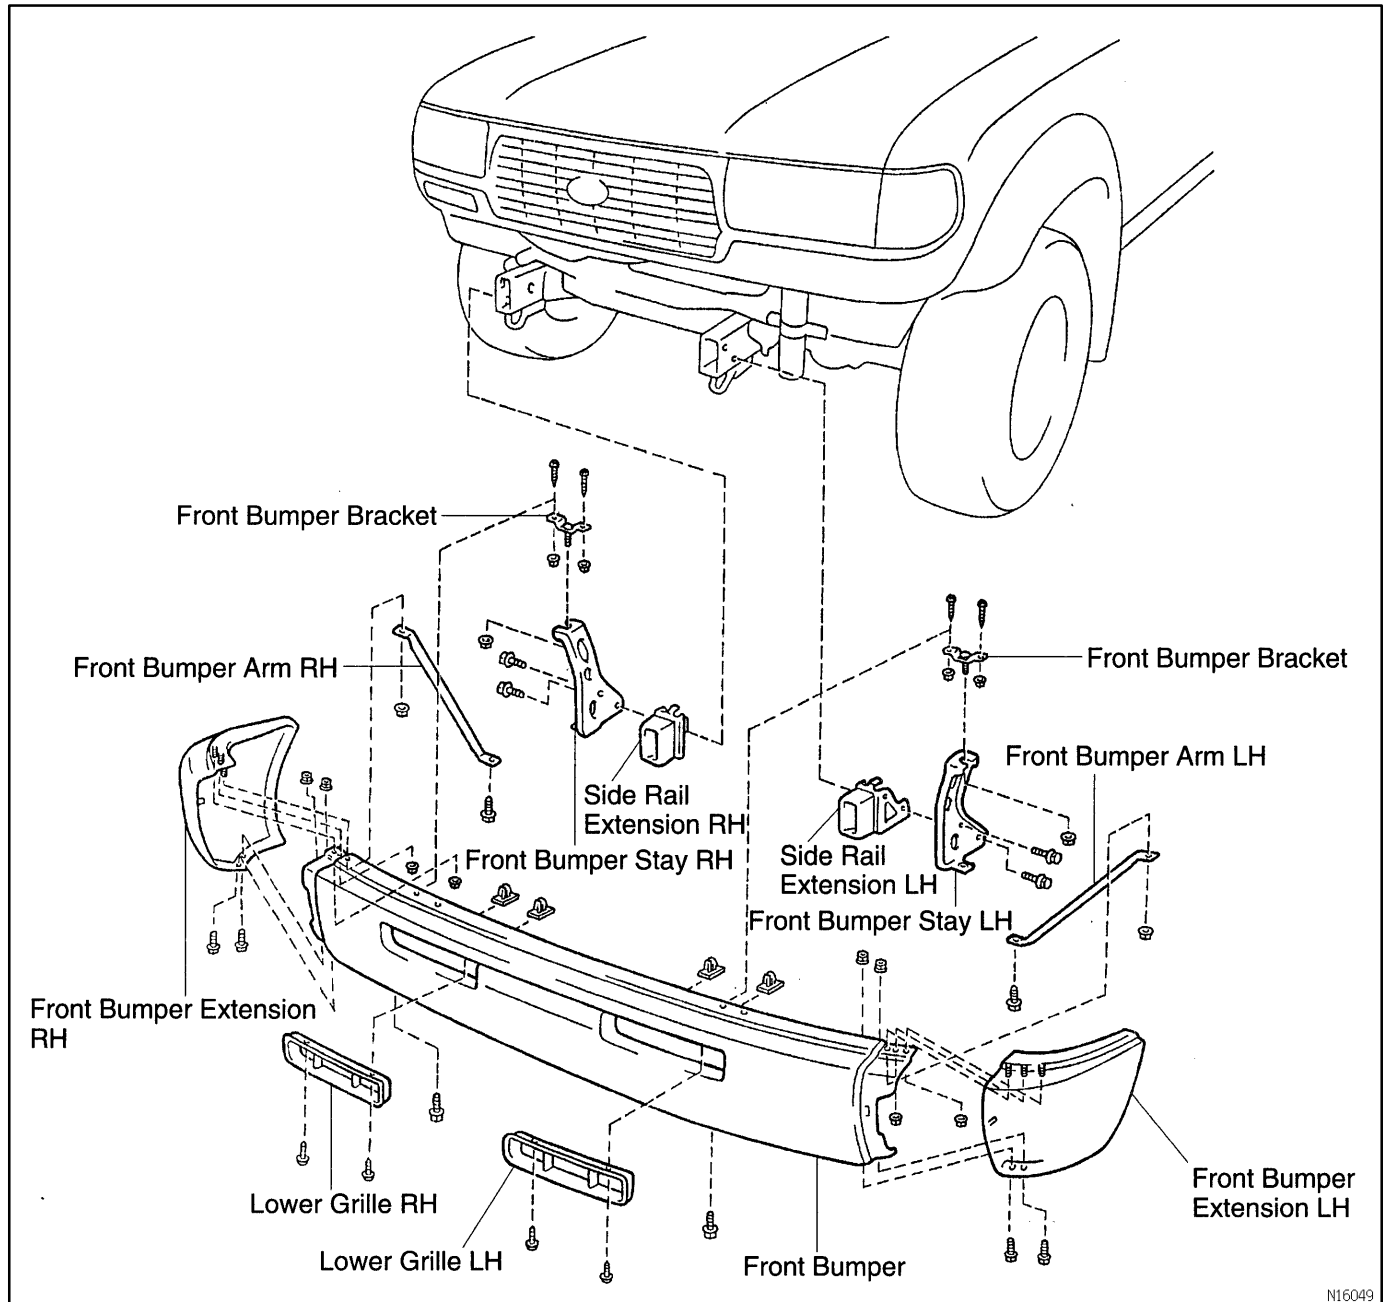

CAUTION:

The side rail extensions are necessary for normal functioning of the SRS airbag, so make sure that they are correctly installed. When replacing the bumper, always inspect the side rail extensions. If they are deformed or cracked, replace them.

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)