


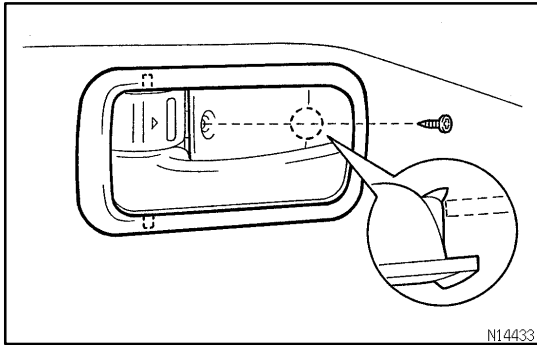


DISASSEMBLY

HINT:

Tape a screwdriver tip before using to pry parts.

1. REMOVE DOOR INSIDE HANDLE BEZEL

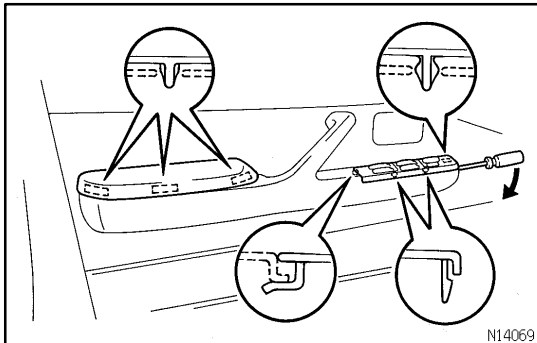


2. REMOVE ARMREST

3. REMOVE ARMREST PANEL BASE UPPER


4. REMOVE COURTESY LIGHT

5. REMOVE LOWER FRAME BRACKET GARNISH

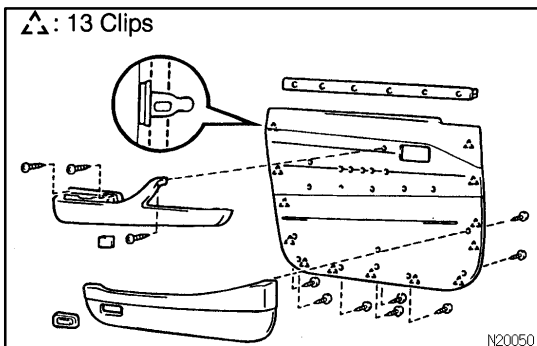

6. REMOVE DOOR TRIM

- Remove the 3 screws from the door trim.
- Using a screwdriver, remove the clip and remove the trim by pulling all of the trim up.
- Remove the 11 screws and armrest base from the door trim.
- Remove the inner weatherstrip from the door trim.
- Remove the 8 screws and door pocket from the door trim.

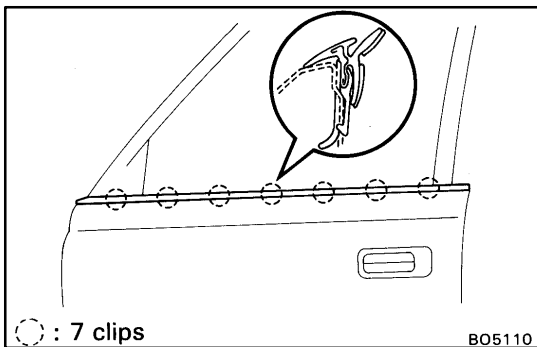

7. REMOVE DOOR BELT MOULDING

Pry out the clip from the edge of the panel, and remove the moulding .

8. REMOVE DOOR WEATHERSTRIP


NOTICE:

Do not pull strongly on the weatherstrip as it may tear.

9. REMOVE DOOR INSIDE HANDLE

10. REMOVE DOOR LOCK CONTROL RELAY

11. REMOVE SERVICE HOLE COVER

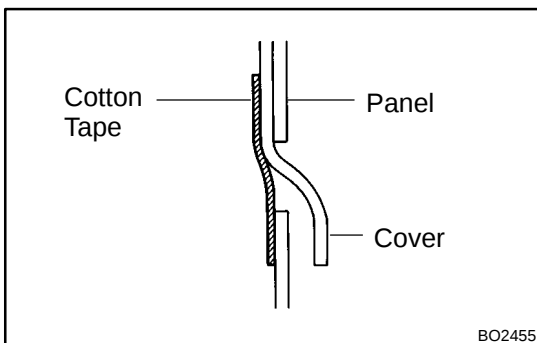


NOTICE:

Do not block the trim clip sealing with the tape.


12. REMOVE OUTSIDE REAR VIEW MIRROR

13. REMOVE DOOR GLASS RUN


14. REMOVE REAR LOWER FRAME

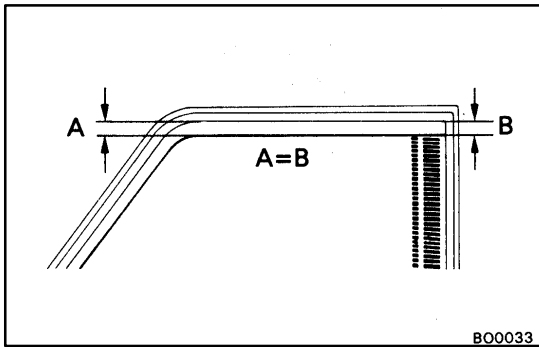**HINT:**

At the time of reassembly, adjust the equalizer arm up to down and tighten if where dimensions A and B, as shown are equal.

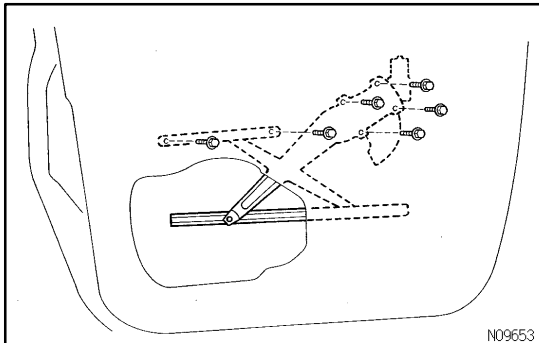**15. REMOVE DOOR GLASS****16. REMOVE WINDOW REGULATOR**


Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)

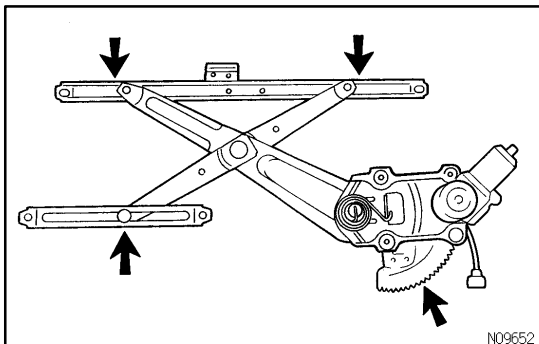**HINT:**

At the time of reassembly, apply MP grease to the sliding surface and gears of the window regulator.

NOTICE:


Do not apply grease to the spring.

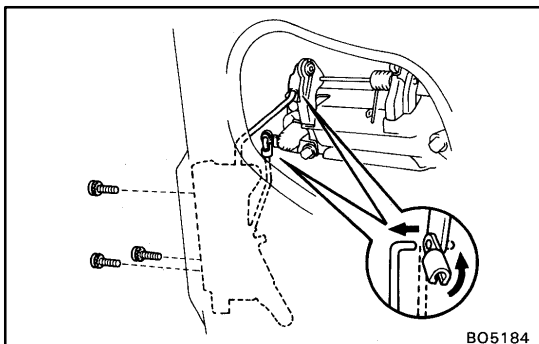17. REMOVE LOCKING AND OPENING CONTROL LINK**18. REMOVE DOOR LOCK****HINT:**

At the time of reassembly, apply adhesive to the 3 screws.

Part No.08833-00070, THREE BOND 1324 or equivalent

Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)

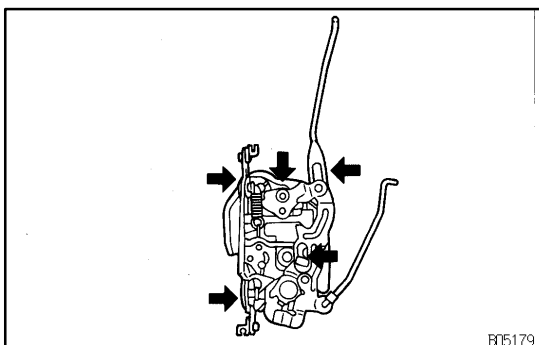**HINT:**

At the time of reassembly, apply MP grease to the sliding surface of the door lock.

19. REMOVE DOOR OUTSIDE HANDLE**20. REMOVE DOOR LOCK CYLINDER****21. REMOVE DOOR SPEAKER**