


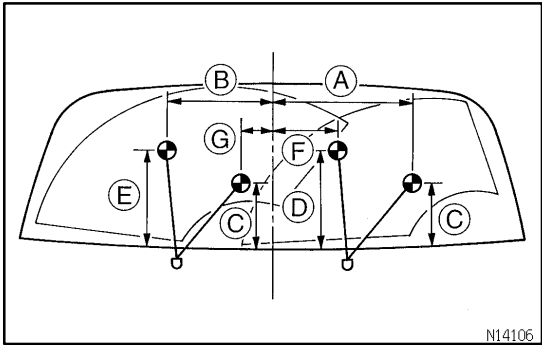


INSPECTION

1. INSPECT FRONT WASHER NOZZLE

- (a) While operating the washer, check that both the point where the washer fluid from the upper nozzles hits the windshield, and the upsurge area, are within the range indicated by the arrow.

A	Approx. 460 mm (18.1 in.)
B	Approx. 300 mm (11.8 in.)
C	Approx. 250 mm (9.84 in.)
D	Approx. 400 mm (15.7 in.)
E	Approx. 410 mm (16.1 in.)
F	Approx. 220 mm (8.66 in.)
G	Approx. 60 mm (2.36 in.)

- (b) Check if the lower point where the washer fluid hits the windshield is within the range of the wiping pattern (the area of the glass which is wiped by the wiper blades).

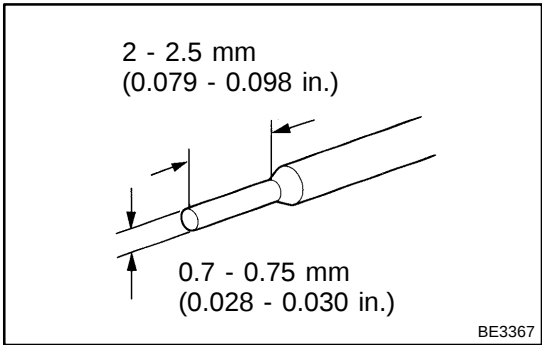

2. ADJUST FRONT WASHER NOZZLE

Using a tool like that shown in the illustration, change the direction of the nozzle hole to adjust the point where washer fluid strikes the windshield.