


INSTALLATION

1. **INSTALL WIPER LINK**
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
2. **INSTALL WIPER MOTOR**
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
3. **INSTALL COWL LOUVER**

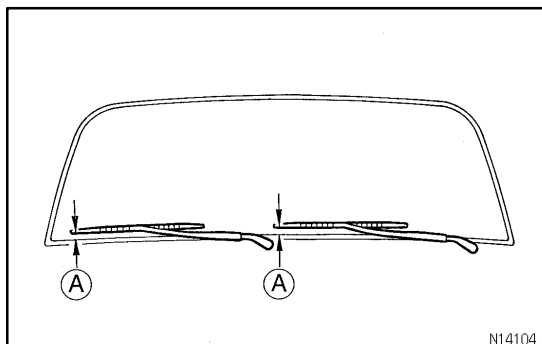

4. **INSTALL FRONT WIPER ARM**
 - (a) Install the wiper arms and operate the wipers once and turn the wiper switch OFF.
 - (b) Adjust the installation positions of the wiper arms to the positions as shown in the illustration.
A: Approx. 25 mm (0.98 in.)
 - (c) Tighten the nuts.
Torque: 20 N·m (210 kgf·cm, 15 ft·lbf)