



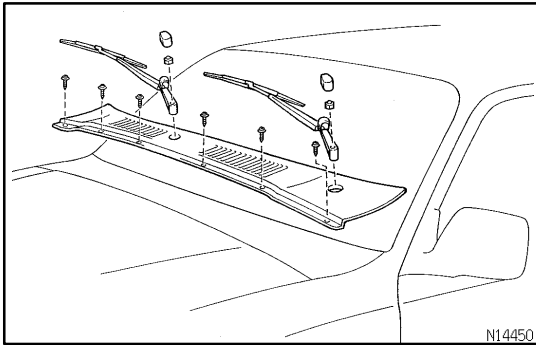

REMOVAL

1. REMOVE WIPER ARMS
2. REMOVE COWL LOUVER

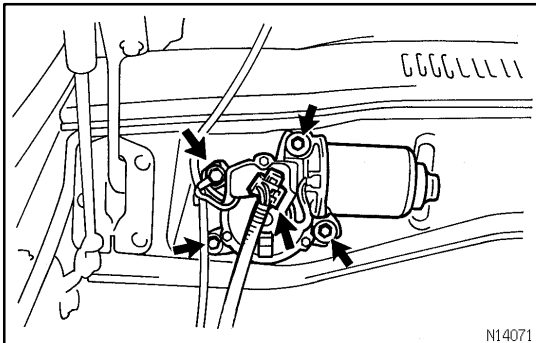

3. REMOVE WIPER MOTOR AND WIPER LINK

- (a) Disconnect the connector, then unfasten 4 bolts and wiper motor.
- (b) Remove the wiper link.