



REMOVAL


1. REMOVE STEERING WHEEL (See page [SR-11](#))
2. REMOVE COLUMN COVER
3. REMOVE HOOD LOCK RELEASE LEVER
4. REMOVE FUEL LID RELEASE LEVER

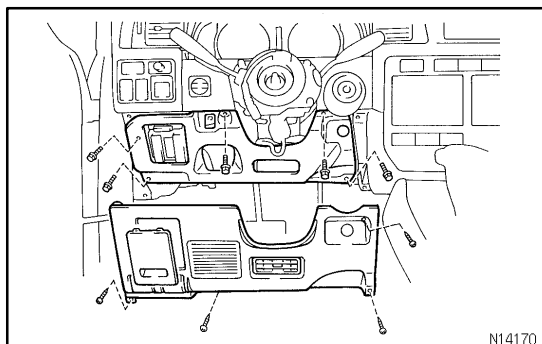


5. REMOVE FUSE BOX OPENING COVER
6. REMOVE LOWER FINISH PANEL
7. REMOVE LOWER INSTRUMENT PANEL
8. REMOVE NO. 2 HEATER TO REGISTER DUCT
9. LOOSEN DLC 3 AND FUSE BLOCK

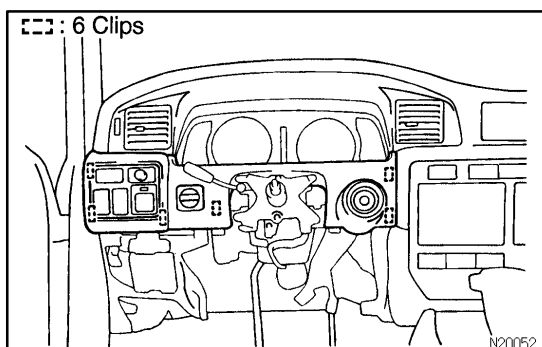


10. REMOVE NO. 2 CENTER CLUSTER FINISH PANEL
11. REMOVE STEERING COLUMN (See page [SR-11](#))

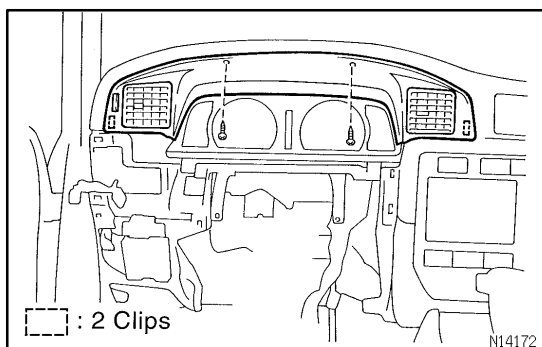

12. REMOVE CLUSTER FINISH PANEL
13. REMOVE COMBINATION METER

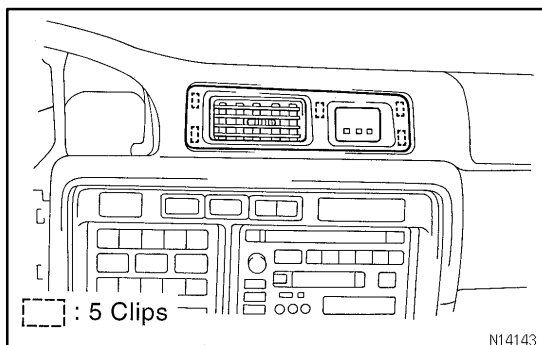

14. REMOVE CENTER CLUSTER FINISH PANEL WITH CLOCK

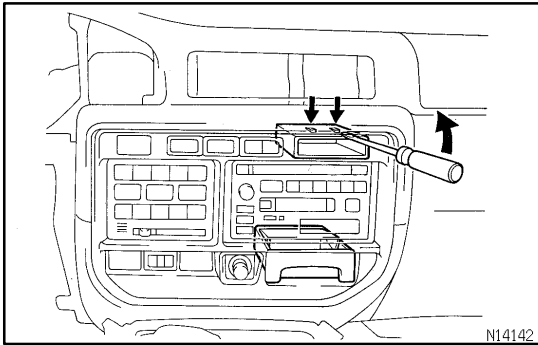


15. REMOVE CENTER CLUSTER FINISH PANEL WITH HEATER CONTROL ASSEMBLY

- (a) Using a screwdriver, take off the 2 claws, then remove the cup holder hole cover.

HINT:

Tape the screwdriver tip before use.

- (b) Take off the ashtray.
(c) Remove the center cluster finish panel with heater control assembly, then disconnect the connectors.

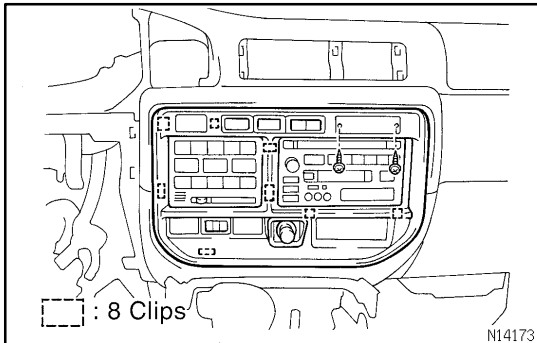


- (d) Remove the 2 screws and heater control assembly from the center cluster finish panel.

16. REMOVE RADIO

17. REMOVE GLOVE COMPARTMENT DOOR

18. REMOVE SPEAKER PANEL AND SPEAKER

19. REMOVE FRONT AND REAR CONSOLE BOX

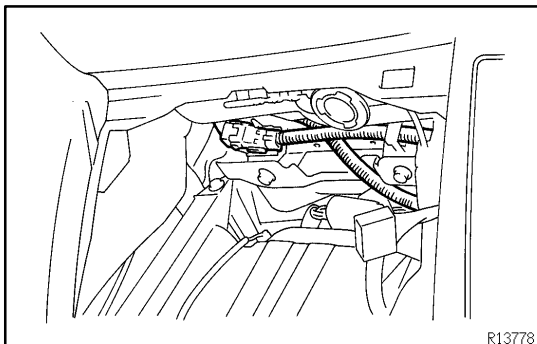


20. DISCONNECT AIRBAG CONNECTOR

- (a) Remove the airbag connector from the airbag bracket.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.


- (b) Disconnect the airbag connector.

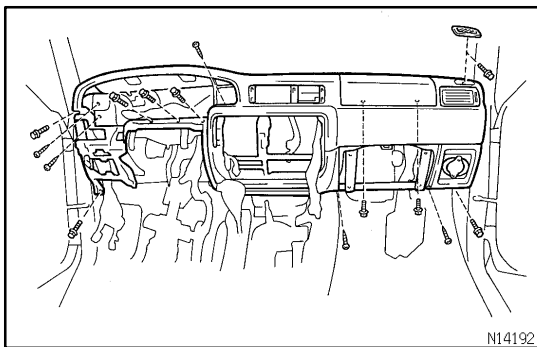

21. REMOVE INSTRUMENT PANEL

- (a) Remove the 5 screws and 9 bolts.
(b) Remove the instrument panel.

Torque: 20 N·m (210 kgf·cm, 15 ft·lbf) for passenger airbag bolts

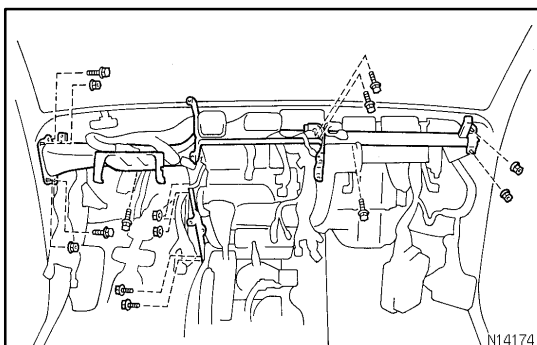

22. REMOVE INSTRUMENT PANEL REINFORCEMENT

- (a) Remove the 2 bolts and lower instrument panel reinforcement.
(b) Remove the 2 bolts, 2 nuts and No. 1 brace.
(c) Remove the 4 bolts, 4 nuts and instrument panel reinforcement.