



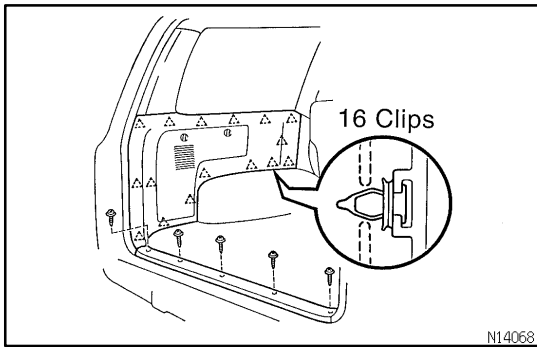


REMOVAL


1. w/ No. 2 rear seat:
NO. 2 REAR SEAT
2. **REMOVE BACK DOOR SCUFF PLATE**
3. **REMOVE QUARTER TRIM**

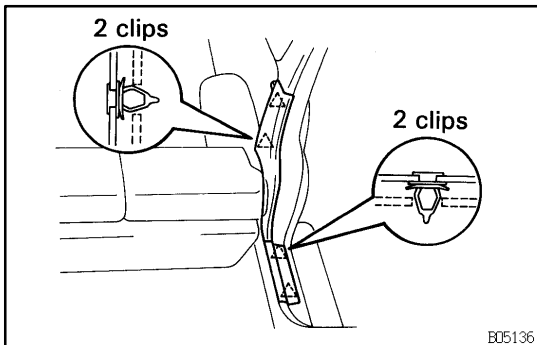

4. **REMOVE REAR SEAT SIDE GARNISH**
5. **REMOVE REAR DOOR SCUFF PLATE**

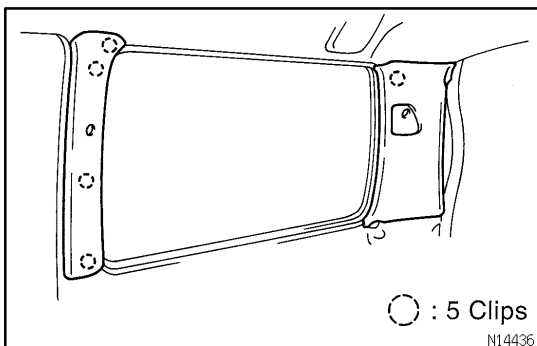


6. **REMOVE QUARTER PILLAR GARNISH**
7. **REMOVE REAR PILLAR GARNISH**
8. **REMOVE ASSIST GRIPS**
9. **LOOSEN ROOF HEADLINING**

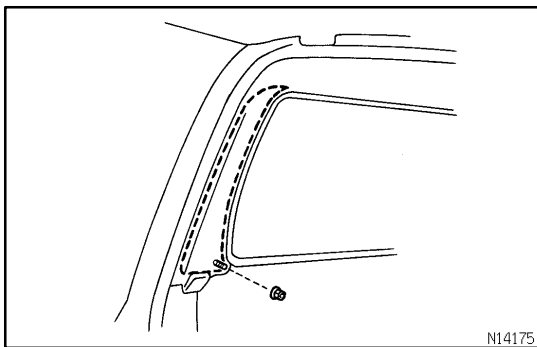

10. **REMOVE VENT LOUVER AND QUARTER BELT MOULDING**

(a) Remove the nut from the vent louver.

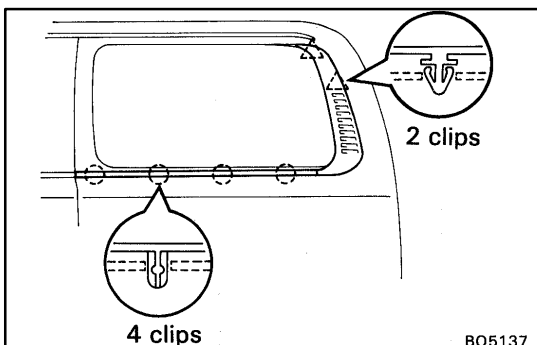


(b) Insert a screwdriver between the retainers and body to pry it loose.

HINT:

Tape the screwdriver tip before use.

- (c) Pull out the vent louver.
- (d) Pull out the clips from the edge of the panel, and remove the moulding.

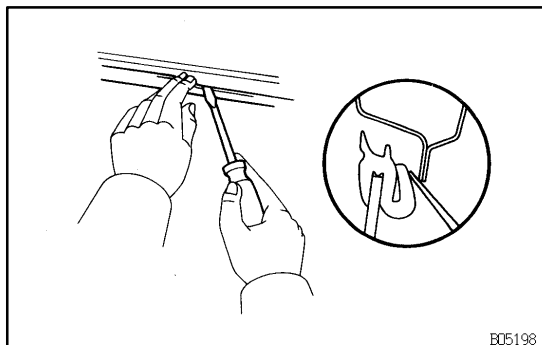
**11. If reusing the weatherstrip:****REMOVE QUARTER WINDOW GLASS**

- (a) Using a screwdriver loosen the weatherstrip from the body.

NOTICE:

Be careful not to damage the body.

- (b) Pry the lip of the weatherstrip outward from the interior part of the body flange.
- (c) Pull the glass outwards and remove it with the weatherstrip.

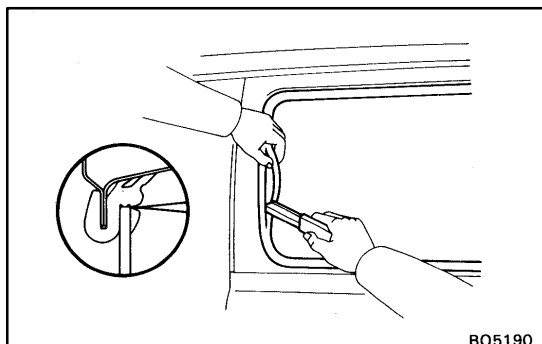**12. If using a new weatherstrip:****REMOVE QUARTER WINDOW GLASS**

- (a) From outside of the vehicle, cut off the weatherstrip lip with a knife.

NOTICE:

Do not damage the body and the glass.

- (b) Push the glass outwards and remove the glass.
- (c) Remove the remaining weatherstrip.