


INSTALLATION

1. INSTALL WIPER CONTROL RELAY
2. INSTALL WIPER MOTOR
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)
3. INSTALL BACK DOOR TRIM
4. INSTALL PULL HANDLE BEZEL
5. INSTALL PULL HANDLE

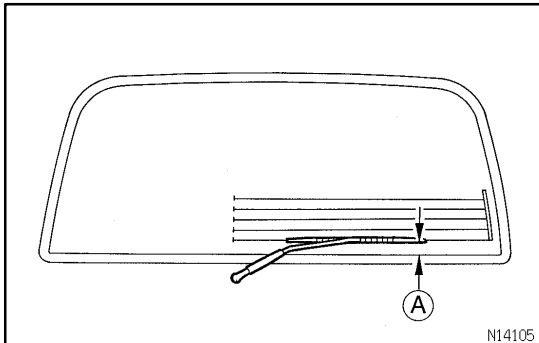

6. **INSTALL REAR WIPER ARM**
 - (a) Install the wiper arm and operate the wipers once and turn the wiper switch OFF.
 - (b) Adjust the installation positions of the wiper arm to the positions shown in the illustration.
A: Approx. 40 mm (1.57 in.)
 - (c) Tighten the nut.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)