


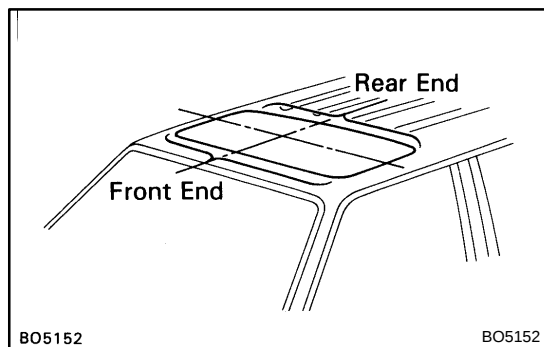

INSPECTION

1. INSPECT SLIDING ROOF GLASS ALIGNMENT

- (a) Start the engine and check the operation time of the sliding roof.

Operation time: Approx. 5 sec.

- (b) Check for abnormal noise or binding during operation.
(c) With the sliding roof fully closed, check for water leakage.
(d) Check for a difference in level between the sliding roof weatherstrip and roof panel.

Front End	0.9 - 3.9 mm (0.035 - 0.154 in.)
Rear End	0.9 - 3.9 mm (0.035 - 0.154 in.)


2. If the sliding roof does not operate:

ADJUST SLIDING ROOF GLASS ALIGNMENT

- (a) Remove the control switch cover.
(b) Remove the large screw inside.

NOTICE:

Be careful not to lose the spring washer or shim.

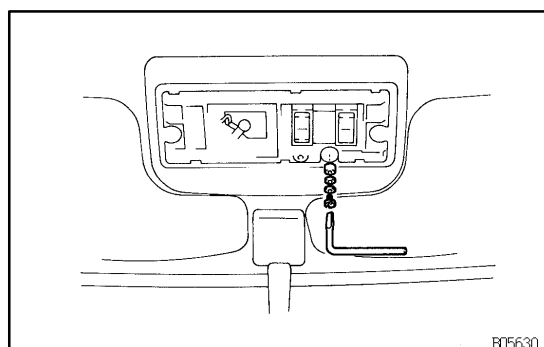

- (c) Manually operate the moon roof by inserting a special crank-shaped screwdriver into the hole and turning the drive shaft.