


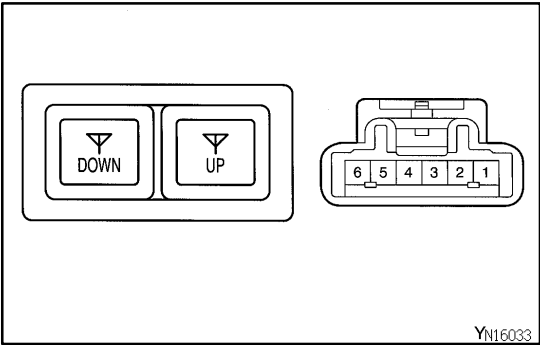


ANTENNA INSPECTION

BE1MS-01

1. w/ MOTOR ANTENNA: INSPECT ANTENNA SWITCH Except RADIO-LINKED TYPE

Condition	Tester connection	Specified condition
UP Button Position Free	2 - 5	Continuity
UP Button Position Pushed in	4 - 5	Continuity
DOWN Button Position Free	2 - 3	Continuity
DOWN Button Position Pushed in	3 - 4	Continuity
Illumination circuit	1 - 6	Continuity

If continuity is not as specified, replace the switch.

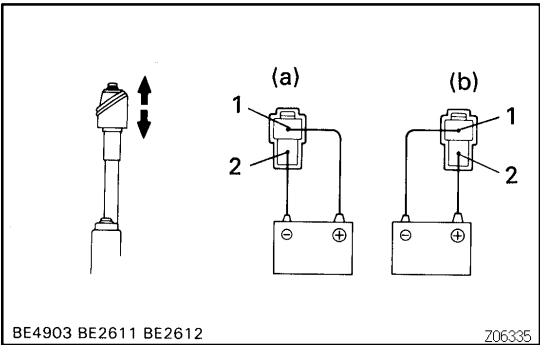

2. INSPECT ANTENNA MOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, and check that the motor turns (moves upward.)
- (b) Then, reverse the polarity, check that the motor turns the opposite way (moves downward.)

If operation is not as specified, replace the motor.