
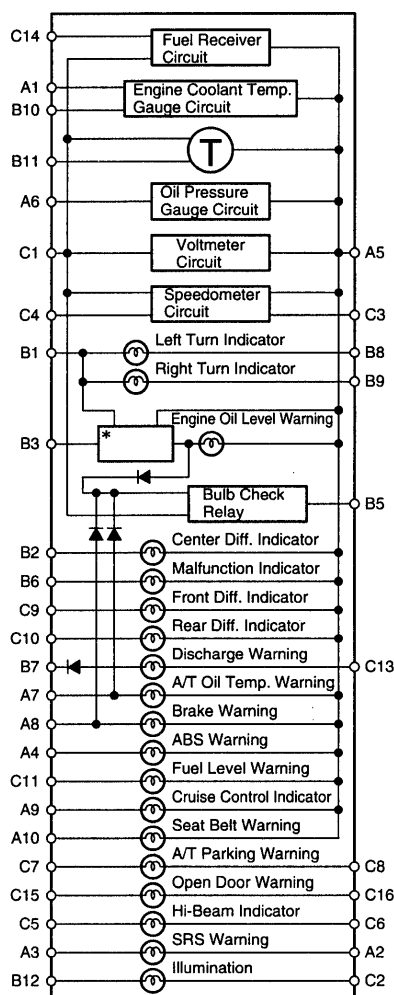


CIRCUIT

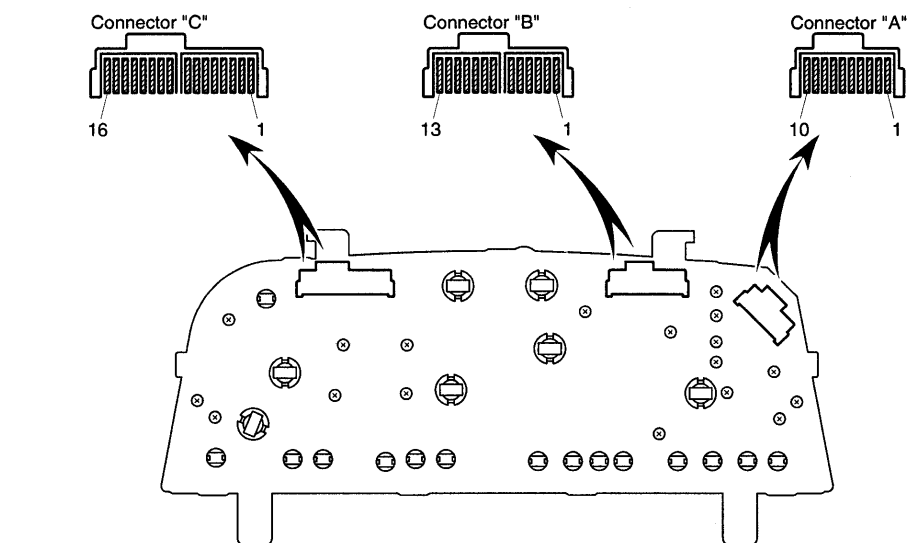


No.	Wiring connector side
A	1 Ground
	2 DOME Fuse
	3 Airbag ECU
	4 ABS ECU
	5 GAUGE Fuse
	6 Oil Pressure Sender Gauge
	7 A/T Fluid Temperature Sensor
	8 Brake Warning Switch
	9 Cruise Control ECU
	10 Seat Belt Warning Relay
B	1 Ground
	2 Center Diff. Lock Indicator Switch
	3 Engine Oil Level Sensor
	5 STARTER Relay
	6 ECM
	7 Charge Light Relay
	8 Light Control Switch (Left)
	9 Light Control Switch (Right)
	10 Engine Coolant Temperature Gauge
	11 Igniter
	12 Light Control Rheostat
C	1 Ground
	2 TAIL Fuse
	3 Speed Control Unit
	4 No.1 Vehicle Speed Sensor
	5 Headlight
	6 Headlight Dimmer Switch
	7 L4 Position Switch
	8 PNP Switch
	9 Front Diff. Lock Indicator Switch
	10 Rear Diff. Lock Indicator Switch
	11 Fuel Level Warning Switch
	13 IGN Fuse
	14 Fuel Sender Gauge
	15 Door Courtesy Switch
	16 DOME Fuse

T : Tacho Meter
 Diff. : Differential
 Temp : Temperature
 * : Engine Oil Level Circuit

N14318
 N14140

Z16425

SHIFT POSITION INDICATOR

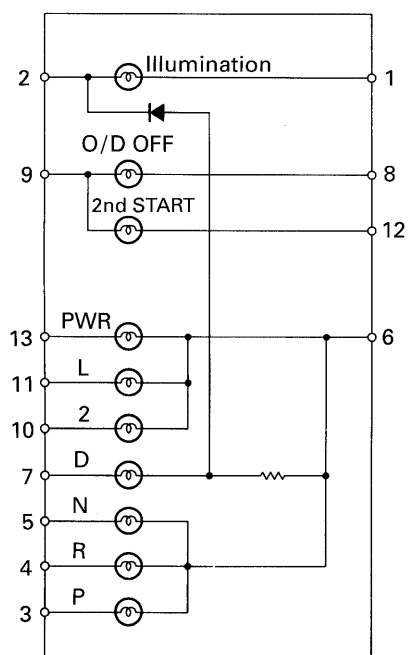

Terminal	Wiring connector side
1	Light Control Rheostat-terminal A
2	TAIL Fuse
3	Park/Neutral Position Switch-terminal 6
4	Park/Neutral Position Switch-terminal 1
5	Park/Neutral Position Switch-terminal 5
6	Ground
7	Park/Neutral Position Switch-terminal 7
8	O/D OFF Switch
9	GAUGE Fuse
10	Park/Neutral Position Switch-terminal 3
11	Park/Neutral Position Switch-terminal 8
12	ECM
13	Pattern Select Switch

N14141

V06501