


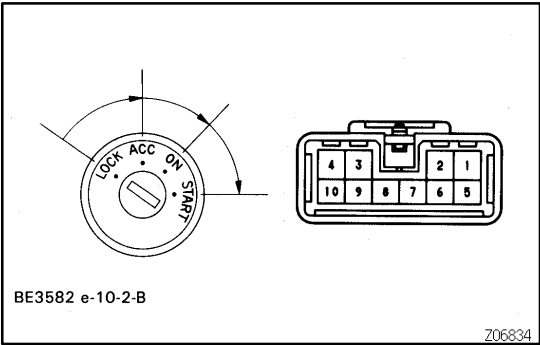

INSPECTION

1. INSPECT IGNITION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	-	No continuity
ACC	7 - 9	Continuity
ON	3 - 4, 6 - 7 - 9	Continuity
START	2 - 3 - 4 6 - 9 - 10	Continuity

If continuity is not as specified, replace the switch.

2. INSPECT SWITCH CONTINUITY

Condition	Tester connection	Specified condition
SW OFF (Key removed)	-	No continuity
SW ON (Key set)	1 - 5	Continuity

If continuity is not as specified, replace the switch.

3. INSPECT DOOR COURTESY SWITCH CONTINUITY
(See page [BE-21](#))
4. INSPECT SEAT BELT WARNING RELAY CIRCUIT
(See page [BE-34](#))

