


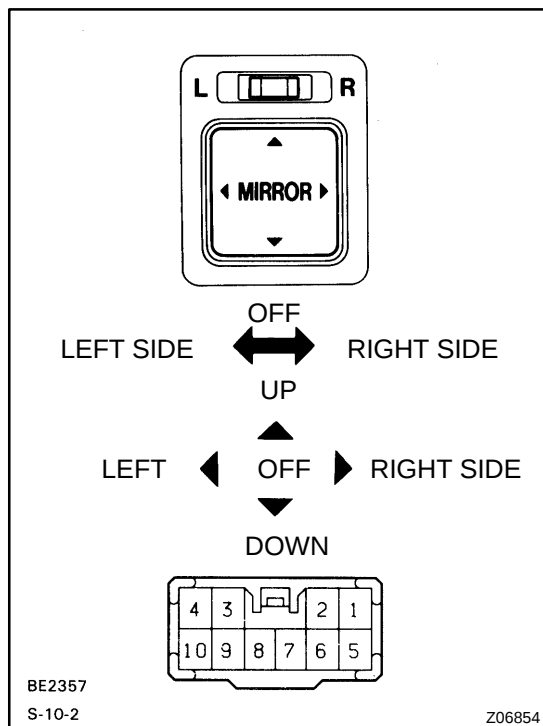

INSPECTION

1. Left side:

INSPECT MIRROR SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
UP	1 - 10, 3 - 4	Continuity
DOWN	1 - 3, 4 - 10	Continuity
LEFT	1 - 9, 3 - 4	Continuity
RIGHT	1 - 3, 4 - 9	Continuity

2. Off:

INSPECT MIRROR SWITCH CONTINUITY


Switch position	Tester connection	Specified condition
OFF	-	No continuity
UP	3 - 4	Continuity
DOWN	1 - 3	Continuity
LEFT	3 - 4	Continuity
RIGHT	1 - 3	Continuity

3. Right side:

INSPECT MIRROR SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
UP	1 - 6, 3 - 4	Continuity
DOWN	1 - 3, 4 - 6	Continuity
LEFT	1 - 2, 3 - 4	Continuity
RIGHT	1 - 3, 2 - 4	Continuity

If continuity is not as specified, replace the switch.

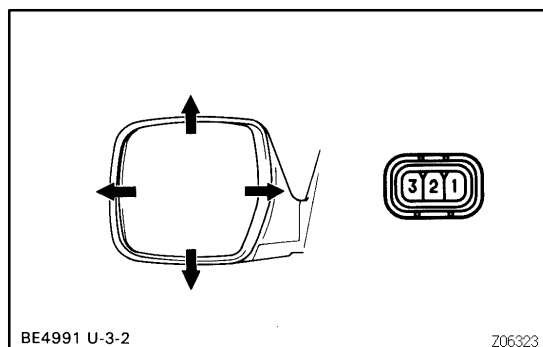

4. INSPECT MIRROR MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal in column "A" and the negative (-) lead to terminal in column "B", check that the mirror operates in column "C".

Switch position	Tester connection	Specified condition
A (+)	B (-)	C (Operation)
2	3	Mirror turns upward
3	2	Mirror turns downward
1	3	Mirror turns to left side
3	1	Mirror turns to right side

If operation is not as specified, replace the mirror assembly.