


REMOVAL

1. REMOVE MASTER CYLINDER (See page [BR-9](#))

2. REMOVE THESE PARTS:

- Return spring
- Clip and clevis pin
- Clevis
- Vacuum hose

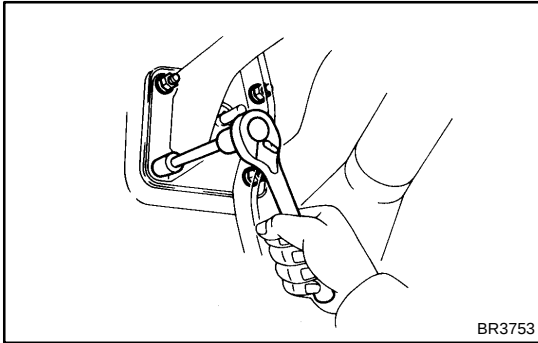

3. REMOVE BRAKE BOOSTER

- (a) Remove the 4 booster installation nuts.
- (b) Remove the booster and gasket.