


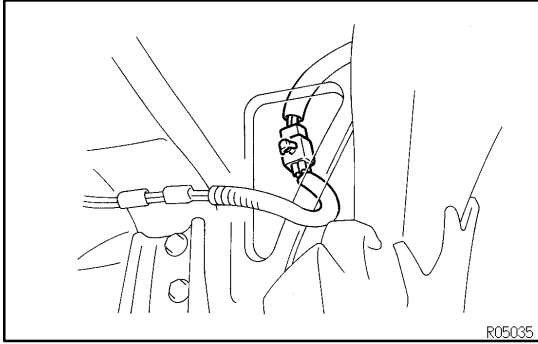

REMOVAL

HINT:

When replacing the sensor or sensor harness, replace the sensor and sensor harness together as a set.

1. DISCONNECT SPEED SENSOR CONNECTOR

2. REMOVE SPEED SENSOR

- (a) Remove the 8 clamp bolts holding the sensor harness from the axle housing.
- (b) Remove the bolt and wire tie holding the sensor harness from the stabilizer bar.
- (c) Remove the bolt and 2 clips holding the sensor harness from the frame and body.
- (d) Remove the 2 installation bolts and speed sensors from the steering knuckle.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)