

INSTALLATION

Installation is in the reverse order of removal (See page [BR-66](#)).

HINT:

After installation, check the speed sensor signal (see page [DI-190](#)).