



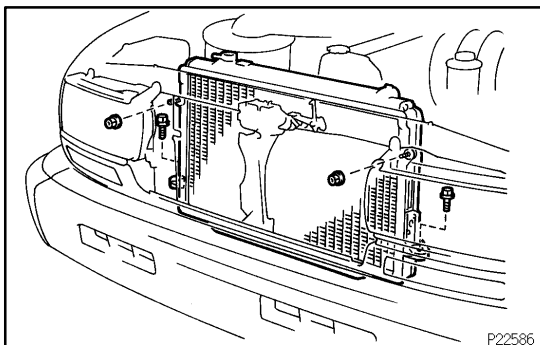

INSTALLATION



1. INSTALL RADIATOR

- (a) Install the 2 radiator brackets with the 4 nuts.
Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)
- (b) Install the radiator with the 2 bolts and 2 nuts.
Torque:
Bolt: 18 N·m (185 kgf·cm, 13 ft·lbf)
Nut: 12 N·m (120 kgf·cm, 9 ft·lbf)

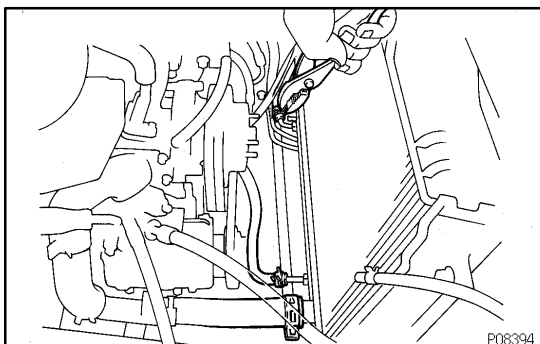


2. CONNECT A/T OIL COOLER HOSES
3. CONNECT RADIATOR OUTLET HOSE
4. INSTALL WATER PUMP PULLEY, FAN SHROUD, FAN WITH FLUID COUPLING AND DRIVE BELTS

- (a) Place the fan with fluid coupling, water pump pulley and fan shroud in position.
- (b) Temporarily install the fan pulley mounting nuts.
- (c) Install the fan shroud with the 2 bolts.
Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)
- (d) Connect the oil cooler hose to the clamp on the fan shroud.
- (e) Install the drive belts with the adjusting bolt and pivot bolt.
- (f) Stretch the belts tight and tighten the 4 water pump pulley mounting nuts.
- (g) Adjust the drive belts (See page [CH-2](#)).

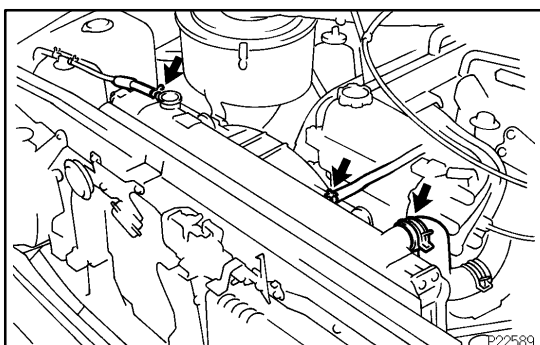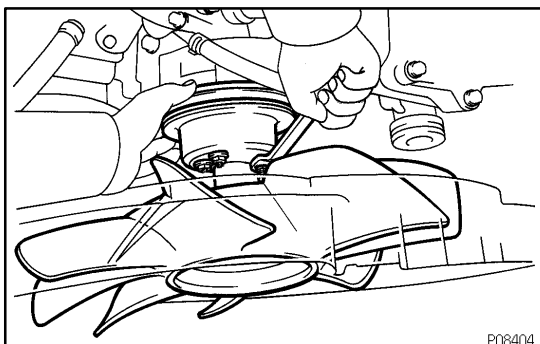

5. CONNECT RADIATOR RESERVOIR HOSE
6. CONNECT RADIATOR INLET HOSE
7. CONNECT NO.3 WATER BYPASS HOSE
8. INSTALL RADIATOR GRILLE

Install the radiator grille with the 5 screws and clip.

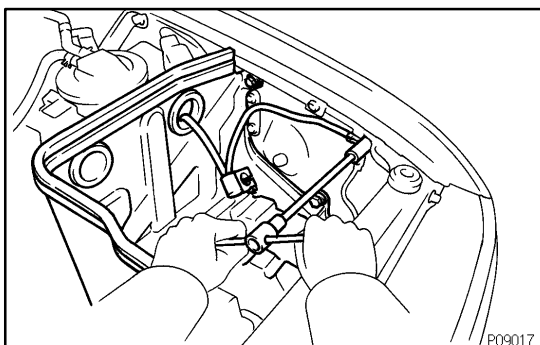

9. INSTALL BATTERY AND BATTERY TRAY
 - (a) Install the battery tray with the 5 bolts.
 - (b) Connect the ground strap with the bolt.
 - (c) Install the battery with the hold-down clamp and nuts.
 - (d) Connect the battery cables.
10. FILL RADIATOR WITH ENGINE COOLANT
11. START ENGINE AND CHECK FOR LEAKS
12. CHECK AUTOMATIC TRANSMISSION FLUID LEVEL