

|            |           |                            |
|------------|-----------|----------------------------|
| <b>DTC</b> | <b>51</b> | <b>ABS Pump Motor Lock</b> |
|------------|-----------|----------------------------|


## CIRCUIT DESCRIPTION

| DTC No. | DTC Detecting Condition                                   | Trouble Area     |
|---------|-----------------------------------------------------------|------------------|
| 51      | Pump motor is not operating normally during initial check | • ABS pump motor |

Fail safe function:

If trouble occurs in the ABS pump motor, the ECU cuts off current to the ABS control (solenoid) relay and prohibits ABS control.

## WIRING DIAGRAM

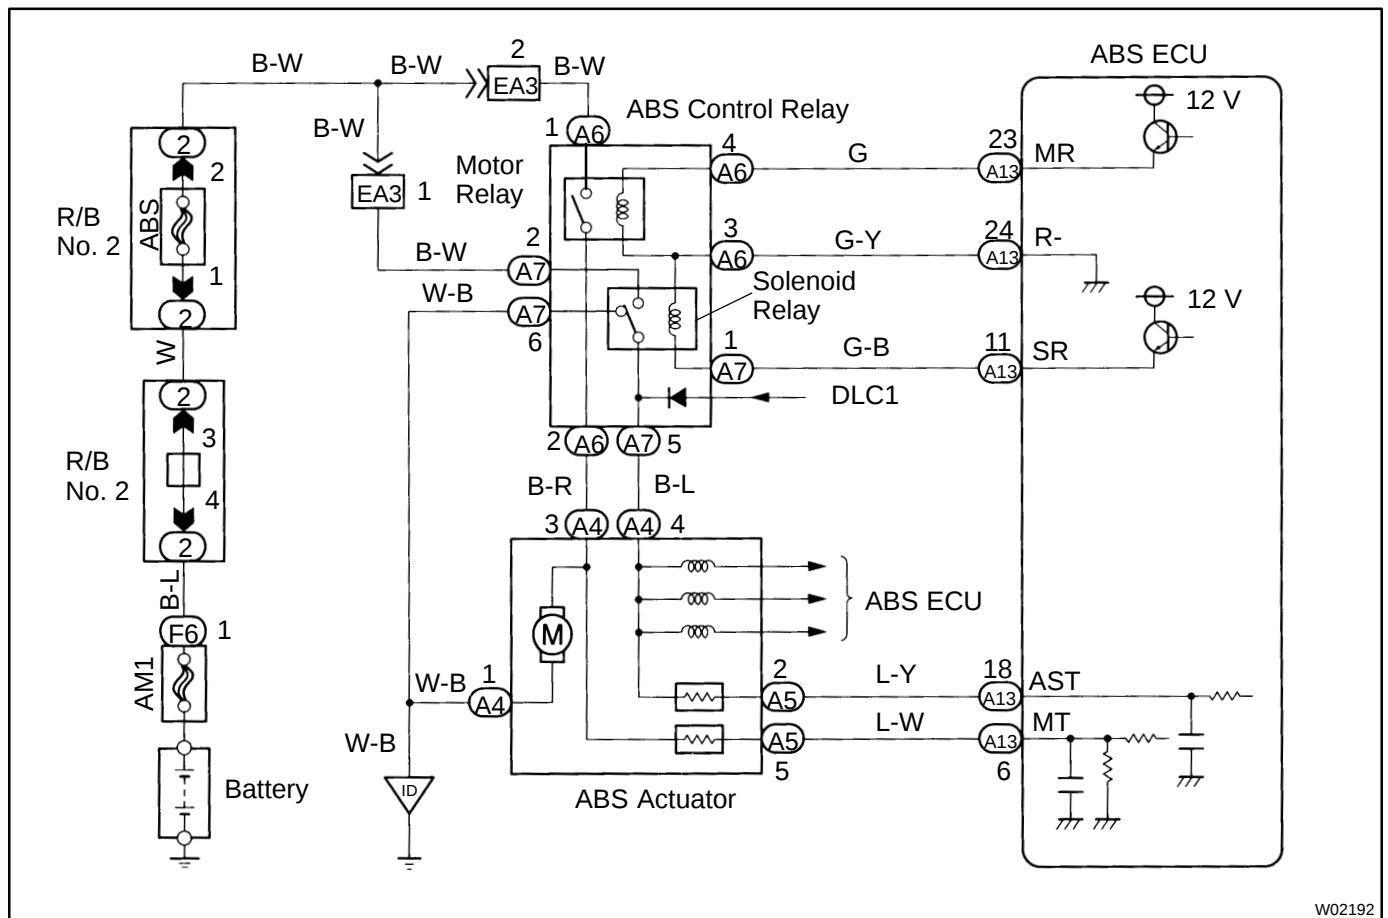

W02192