


Ts Terminal Circuit

CIRCUIT DESCRIPTION


The sensor check circuit detects abnormalities in the speed sensor signal which cannot be detected with the DTC check. Connecting terminals Ts and E₁ of the DLC1 in the engine compartment starts the check.

WIRING DIAGRAM

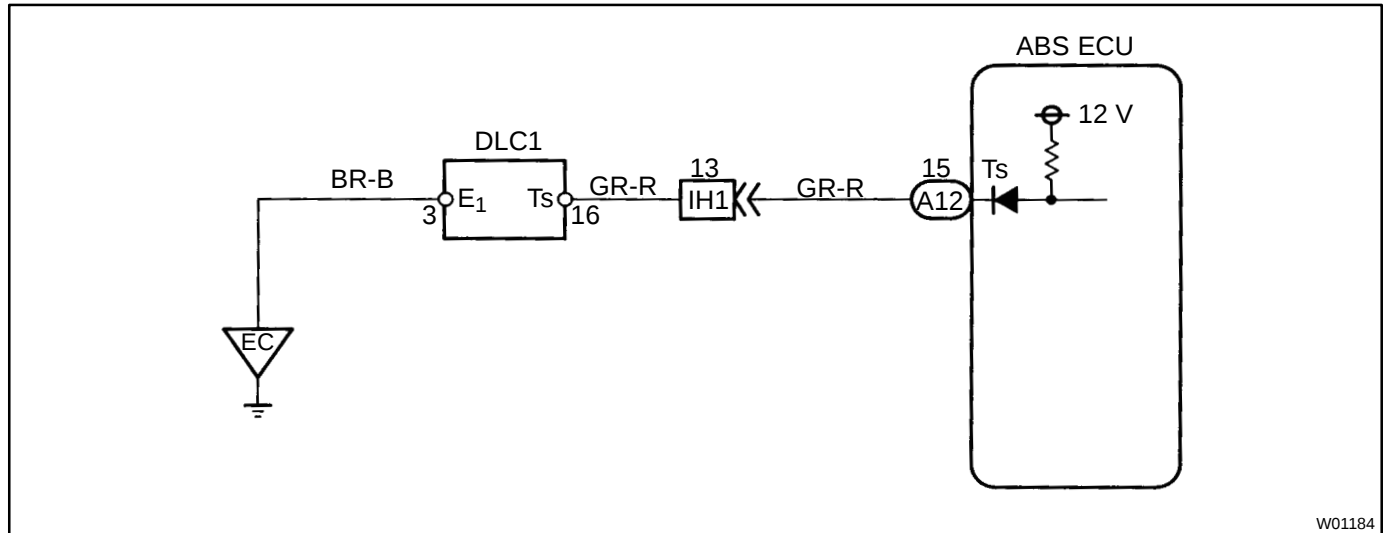

INSPECTION PROCEDURE

- 1 Check voltage between terminals Ts and E₁ of DLC1.

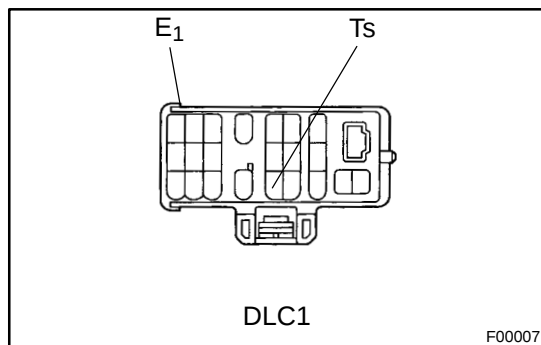

CHECK:

- (a) Turn the ignition switch ON.
- (b) Measure the voltage between terminals Ts and E₁ of the DLC1.

OK:

Voltage: 10 - 14 V

OK

If ABS warning light does not blink even after Ts and E₁ are connected, ECU may be defective.

NG

2	Check for open and short in harness and connector between ABS ECU and DLC1, and DLC1 and body ground (See page IN-28).
---	---

NG

Repair or replace harness or connector.

OK

Check and replace ABS ECU.