


TERMINALS OF ECU

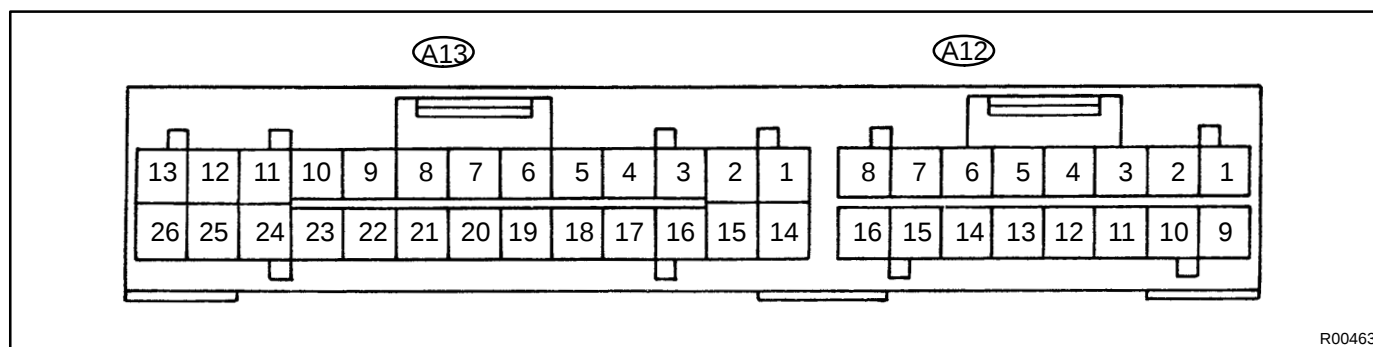

R00463

Symbols (Terminal No.)	Wiring Color	Condition	STD Voltage (V)
BAT (A13-25) - GND (A13-2, 15)	B-R - BR	Always	10 - 14
+B (A13-12) - GND (A13-2, 15)	B-W - BR	IG switch ON	10 - 14
SR (A13-11) - R- (A13-24)	G-B - G-Y	IG switch ON ABS warning light OFF	9 - 14
MR (A13-23) - R- (A13-24)	G - G-Y	IG switch ON	Below 1.0
SFR (A13-1) - GND (A13-2, 15)	L - BR	IG switch ON ABS warning light OFF	10 - 14
SFL (A13-13) - GND (A13-2, 15)	LG - BR	IG switch ON ABS warning light OFF	10 - 14
SRR (A13-26) - GND (A13-2, 15)	L-R - BR	IG switch ON ABS warning light OFF	10 - 14
AST (A13-18) - GND (A13-2, 15)	L-Y - BR	IG switch ON ABS warning light OFF	10 - 14
W (A12-13) - GND (A13-2, 15)	O - BR	IG switch ON ABS warning light ON	Below 2.0
		IG switch ON ABS warning light OFF	10 - 14
PKB (A12-14) - GND (A13-2, 15)	R-B - BR	IG switch ON PKB switch ON	Below 1.5
		IG switch ON PKB switch OFF	8 - 14
STP (A12-6) - GND (A13-2, 15)	G-W - BR	Stop light switch OFF	Below 1.5
		Stop light switch ON	8 - 14
Tc (A13-5) - GND (A13-2, 15)	B-Y - BR	IG switch ON	8 - 14
Ts (A12-15) - GND (A13-2, 15)	GR-R - BR	IG switch ON	8 - 14
FR+ (A13-16) - FR- (A13-3)	B - Y	IG switch ON Slowly turn right front wheel	AC generation
FL+ (A13-9) - FL- (A13-22)	V - P	IG switch ON Slowly turn left front wheel	AC generation
RR+ (A12-8) - RR- (A12-16)	L - G	IG switch ON Slowly turn right rear wheel	AC generation
RL+ (A12-9) - RL- (A12-1)	R - W	IG switch ON Slowly turn left rear wheel	AC generation
GS1 (A12-12) - GND (A13-2, 15)	Y - BR	IG switch ON	0.5 - 4.5 or 7 - 11
GS2 (A12-3) - GND (A13-2, 15)	Y-B - BR	IG switch ON	4 - 6