

AUTOMATIC TRANSMISSION

HOW TO PROCEED WITH TROUBLESHOOTING

DISK4-03

Troubleshoot in accordance with the procedure on the following page.

