

Main Switch Circuit (Cruise Control Switch)

CIRCUIT DESCRIPTION


When the cruise control main switch is turned off, the cruise control does not operate.

WIRING DIAGRAM

See page [DI-31 1.](#)

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check voltage between terminal CMS of cruise control ECU connector and body ground. |
|---|---|

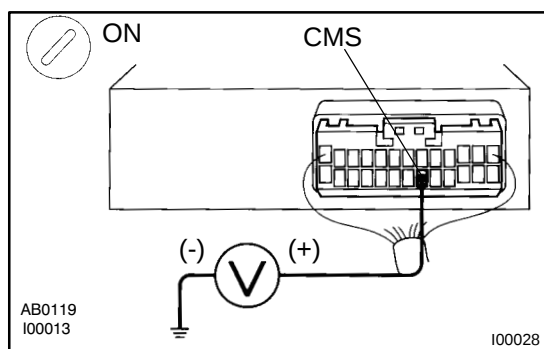

PREPARATION:

- (a) Remove the ECU with connector still connected.
- (b) Turn ignition switch ON.

CHECK:

Measure voltage between terminal CMS of cruise control ECU connector when main switch is held on and off.

OK:

Main switch	Voltage
OFF	10 - 14 V
ON	Below 2 V


OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-295](#)).

NG

2

Check main switch continuity.

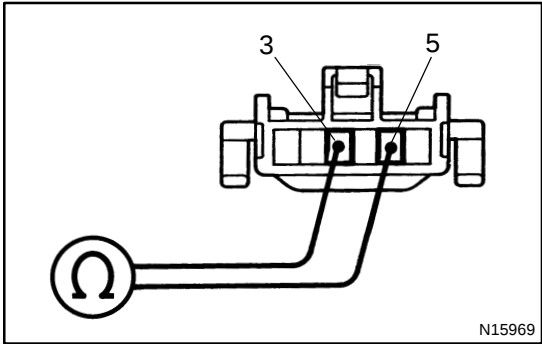

PREPARATION:

- (a) Remove steering wheel center pad (See page [SR-11](#)).
- (b) Disconnect the control switch connector.

CHECK:

Check continuity between terminals 3 and 5 of control switch connector when main switch is held on and off.

OK:

Switch position	Tester connection	Specified condition
OFF	3 - 5	No continuity
Hold ON	3 - 5	Continuity

NG

Replace control switch.

OK

3

Check harness and connector between cruise control ECU and main switch (See page [IN-28](#)).

NG

Repair or replace harness or connector.

OK

Check and replace cruise control ECU (See page [IN-28](#)).