


CRUISE CONTROL SYSTEM

HOW TO PROCEED WITH TROUBLESHOOTING

DI504-02

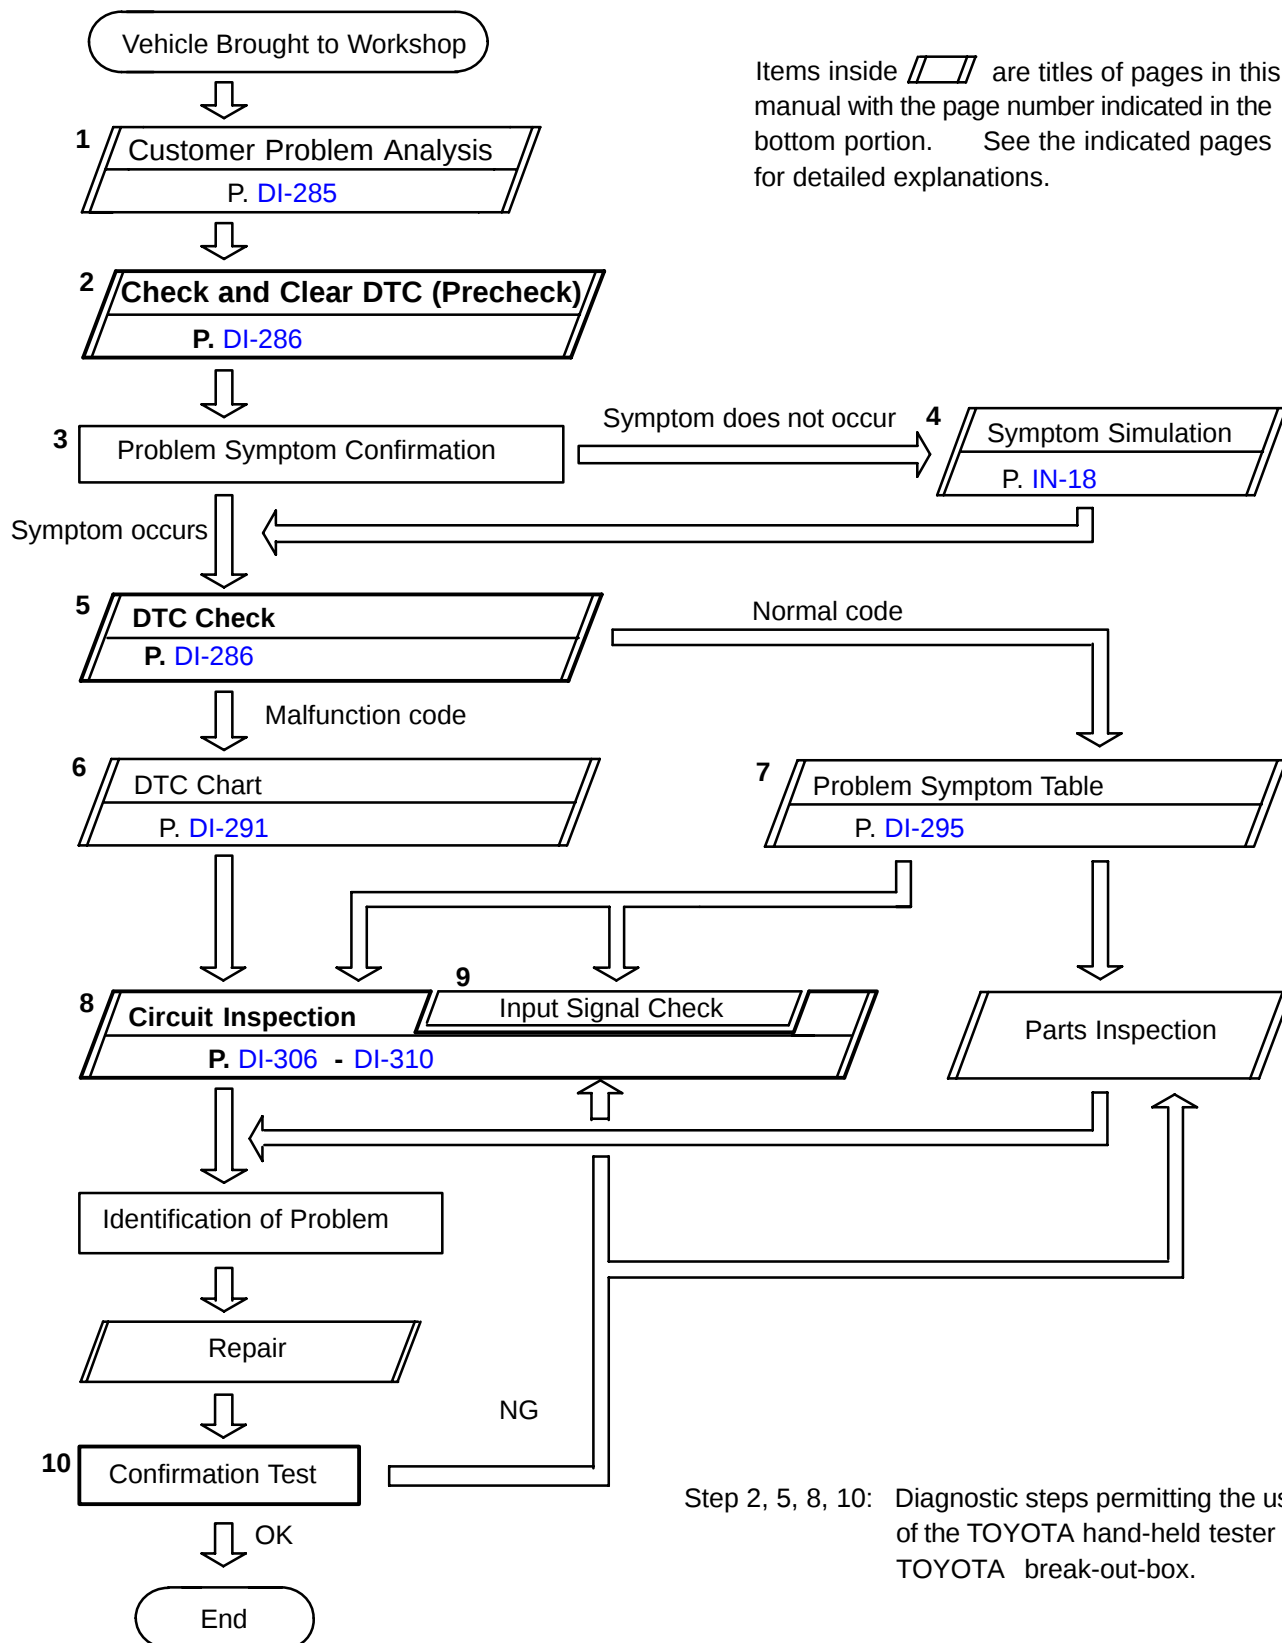

Step 2, 5, 8, 10: Diagnostic steps permitting the use of the TOYOTA hand-held tester or TOYOTA break-out-box.