

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
SET not occurring or CANCEL occurring. (DTC is Normal)	1. Main Switch Circuit (Cruise control switch) 2. Vehicle Speed Sensor 3. Control Switch Circuit (Cruise control switch) 4. Stop Light Switch Circuit 5. Park/Neutral Position Switch Circuit 6. Actuator Motor Circuit 7. Cruise Control Cable 8. Cruise Control ECU	DI-330 DI-306 DI-311 DI-314 DI-322 DI-296 DI-336 IN-28
SET not occurring or CANCEL occurring. (DTC dose not output)	1. ECU Power Source Circuit 2. Cruise Control ECU	DI-325 IN-28
Actual vehicle speed deviates above or below the set speed.	1. Cruise Control Cable 2. Vehicle Speed Signal Abnormal 3. Electronically Controlled Transmission Communication Circuit 4. Actuator Motor Circuit 5. Idle Signal Circuit (main throttle position sensor) 6. Cruise Control ECU	DI-336 DI-310 DI-319 DI-296 DI-316 IN-28
Gear shifting frequent between 3rd O/D when driving on uphill road. (Hurting)	1. Electronically Controlled Transmission Communication Circuit 2. Cruise Control ECU	DI-319 IN-28
Cruise control not cancelled, even when brake pedal is depressed.	1. Cruise Control Cable 2. Stop Light Switch Circuit 3. Actuator Motor Circuit 4. Cruise Control ECU	DI-336 DI-314 DI-296 IN-28
Cruise control not cancelled, even when transmission is shifted to "N" position.	1. Cruise Control Cable 2. Park/Neutral Position Switch Circuit 3. Actuator Motor Circuit 4. Cruise Control ECU	DI-336 DI-322 DI-296 IN-28
Control switch does not operate. (SET/COAST, ACC/RES, CANCEL not possible)	1. Cruise Control Cable 2. Control Switch Circuit 3. Actuator Motor Circuit 4. Cruise Control ECU	DI-336 DI-311 DI-296 IN-28
SET possible at 40 km/h (25 mph) or less, or CANCEL does not operate at 40 km/h (25 mph) or less.	1. Cruise Control Cable 2. Vehicle Speed Signal Abnormal 3. Actuator Motor Circuit 4. Cruise Control ECU	DI-336 DI-310 DI-296 IN-28
Poor response is ACCEL and RESUME modes.	1. Cruise Control Cable 2. Electronically Controlled Transmission Communication Circuit 3. Actuator Motor Circuit 4. Cruise Control ECU	DI-336 DI-319 DI-296 IN-28
O/D does not RESUME, even though the road is not uphill.	1. Electronically Controlled Transmission Communication Circuit 2. Cruise Control ECU	DI-319 IN-28
DTC memory is erased.	1. Back-up Power Source Circuit 2. Cruise Control ECU	DI-328 IN-28
DTC is not output, or is output when is should not be.	1. Diagnosis Circuit 2. Cruise Control ECU	DI-319 IN-28
Cruise MAIN indicator light remains ON or fall to light up.	1. Cruise MAIN Indicator Light Switch Circuit	DI-332