

|            |              |                                                                               |
|------------|--------------|-------------------------------------------------------------------------------|
| <b>DTC</b> | <b>P1335</b> | <b>Crankshaft Position Sensor Circuit Malfunction (during engine running)</b> |
|------------|--------------|-------------------------------------------------------------------------------|

## CIRCUIT DESCRIPTION

Refer to DTC P0335 (Crankshaft Position Sensor "A" Circuit Malfunction) on page [DI-62](#) .

| DTC No. | DTC Detecting Condition                                                                     | Trouble Area                                                                                                                                                                                           |
|---------|---------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| P1335   | No crankshaft position sensor signal (NE signal) to ECM with engine speed 1,000 rpm or more | <ul style="list-style-type: none"><li>• Open or short in crankshaft position sensor circuit for NE signal</li><li>• Crankshaft position sensor for NE signal</li><li>• Starter</li><li>• ECM</li></ul> |

## WIRING DIAGRAM

See DTC P0335 (Crankshaft Position Sensor "A" Circuit Malfunction) for WIRING DIAGRAM and INSPECTION PROCEDURE.