

DTC	P1605	Knock Control CPU Malfunction
------------	--------------	--------------------------------------

CIRCUIT DESCRIPTION

Refer to DTC P0325, P0330 (Knock Sensor 1, 2 Circuit Malfunction) on page [DI-59](#) .

DTC No.	DTC Detecting Condition	Trouble Area
P1605	Engine control computer malfunction (for knock control)	• ECM

WIRING DIAGRAM

Refer to P0325, P0330 (Knock Sensor 1, 2 Circuit Malfunction) on page [DI-59](#) .

INSPECTION PROCEDURE

1	Are there any other codes (besides DTC P1605) being output?
----------	--

YES

Go to relevant DTC chart.

NO

Check and replace ECM (See page [IN-28](#)).