

PROBLEM SYMPTOMS TABLE

Proceed with troubleshooting of each circuit in the table below.

Symptom	Suspect Area	See page
• With the ignition switch at ACC or ON, the SRS warning light sometimes lights up after approx. 6 seconds have elapsed. • SRS warning light lights up even when ignition switch is in the LOCK position.	• SRS warning light system malfunction (Always lit up when ignition switch is in LOCK position.)	DI-274
• With the ignition switch at ACC or ON, the SRS warning lights does not light up.	• SRS warning light system malfunction (Does not light up when ignition switch is turned to ACC or ON.)	DI-276
• DTC not displayed. • SRS warning light is always lit up with a DTC check procedure. • DTC displayed without Tc and E1 terminal connection.	• Tc terminal circuit	DI-279