


## REMOVAL

1. REMOVE ENGINE UNDER COVER
2. REMOVE CRANKSHAFT POSITION SENSOR PROTECTOR

Remove the 3 bolts and crankshaft position sensor protector.

**Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)**

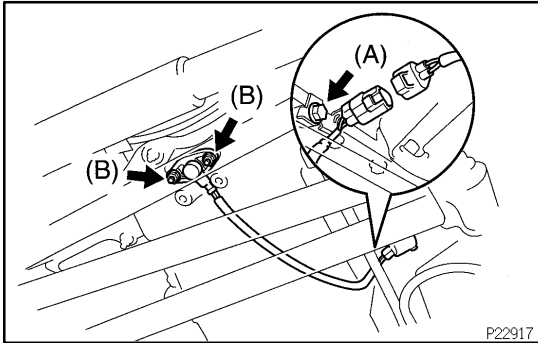

3. DISCONNECT CRANKSHAFT POSITION SENSOR BRACKET AND CONNECTOR
4. REMOVE CRANKSHAFT POSITION SENSOR

Remove the bolt, 2 nuts and crankshaft position sensor.

**Torque:**

**Bolt A: 20 N·m (200 kgf·cm, 14 ft·lbf)**

**Nut B: 9 N·m (90 kgf·cm, 78 in·lbf)**