
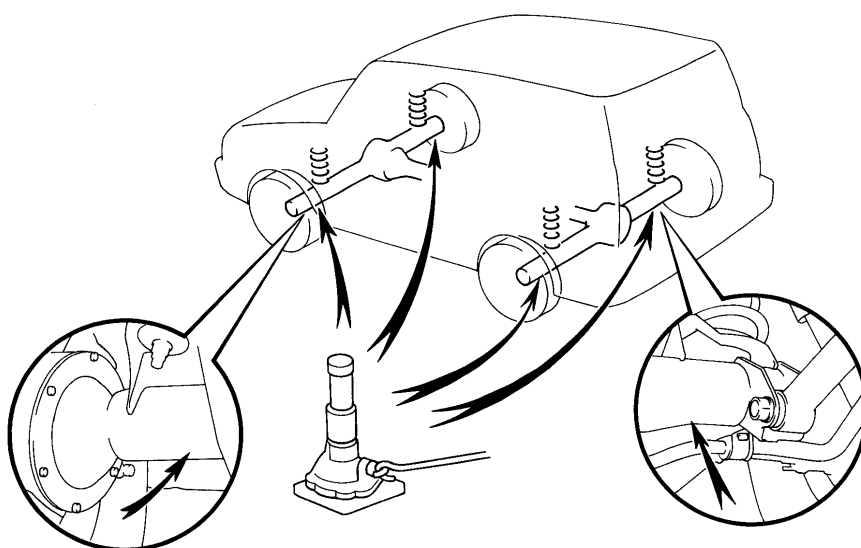


VEHICLE LIFT AND SUPPORT LOCATIONS

Front
←

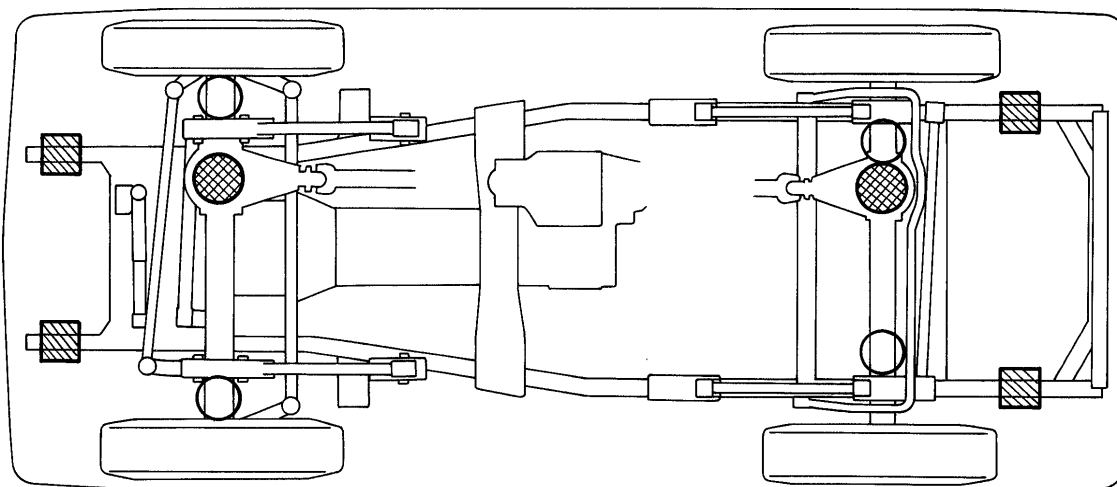

JACK POSITION ————— ●

Front Under front differential

Rear Under rear differential

SCREW TYPE JACK POSITION ————— ○

SUPPORT POSITION

Safety stand ■

Z00796