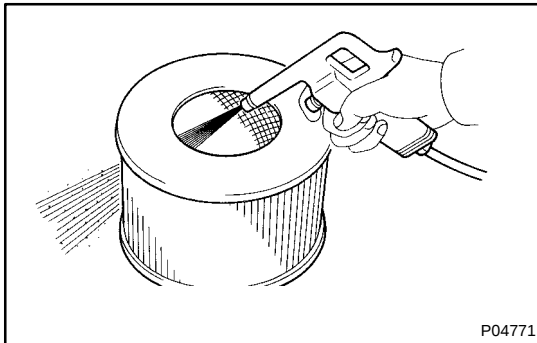


ENGINE INSPECTION

MA04U-01

HINT:

Inspect these items when the engine is cold.

1. INSPECT DRIVE BELT (See page CH-2)**2. INSPECT AIR FILTER**

- (a) Visually check that the air cleaner element is not excessively dirty, damaged or oily.

If necessary, replace the air cleaner element.

- (b) Clean the element with compressed air.
First blow from the inside thoroughly, then blow off the outside of the element.

3. REPLACE AIR FILTER

Replace the air cleaner element with a new one.

4. REPLACE SPARK PLUGS (See page IG-1)**5. REPLACE ENGINE OIL AND OIL FILTER (See page LU-2)****6. REPLACE ENGINE COOLANT (See page CO-2)****7. INSPECT CHARCOAL CANISTER (See page EC-6)****8. REPLACE GASKET IN FUEL TANK CAP (See page EC-6)****9. INSPECT FUEL LINES AND CONNECTIONS (See page EC-6)****10. INSPECT EXHAUST PIPES AND MOUNTINGS**

Visually inspect the pipes, hangers and connections for severe corrosion, leaks or damage.

11. ADJUST VALVE CLEARANCE (See page EM-4)