 
 
 
 
 
 


 
 
 
 
 
 
 
TRANSFER

SST (Special Service Tools)

PP3KQ-01

	09223-00010	Cover & Seal Replacer	Center differential
	09223-15020	Oil Seal & Bearing Replacer	Front extension housing
	09316-12010	Transfer Bearing Replacer	Center differential
	09316-2001 1	Transfer Bearing Replacer	Front extension housing Rear extension housing Component parts removal and installation
	09316-6001 1	Transmission & Transfer Bearing Replacer	
	(09316-0001 1)	Replacer Pipe	Front extension housing Rear extension housing Idler gear Component parts removal and installation Center differential
	(09316-00021)	Replacer "A"	Rear extension housing
	(09316-00031)	Replacer "B"	Front extension housing Rear extension housing Idler gear Component parts removal and installation Input shaft
	(09316-00041)	Replacer "C"	Component parts removal and installation Front extension housing Rear extension housing
	(09316-00061)	Replacer "E"	Front extension housing
	(09316-00071)	Replacer "F"	Idler gear Front extension housing
	09325-12010	Transmission Oil Plug	Rear extension housing

PREPARATION - TRANSFER

	09527-30010	Rear Axle Shaft Bearing Remover	Input shaft
	09608-00081	Differential Side Bearing Cone Replacer	Component parts removal and installation
	09612-24014	Steering Gear Housing Overhaul Tool Set	Center differential
	(09612-10050)	Steering Rack Shaft Bushing Replacer	
	09950-00020	Bearing Remover	Idler gear Center differential Front extension housing
	09950-00030	Bearing Remover Attachment	Center differential
	09950-4001 1	Puller B Set	Component parts removal and installation Front extension housing
	09950-60010	Replacer Set	
	(09951-00320)	Replacer 32	Component parts removal and installation Center differential
	(09951-00400)	Replacer 40	Center differential
	09950-70010	Handle Set	Component parts removal and installation Front extension housing Center differential
	(09951-07150)	Handle 150	