



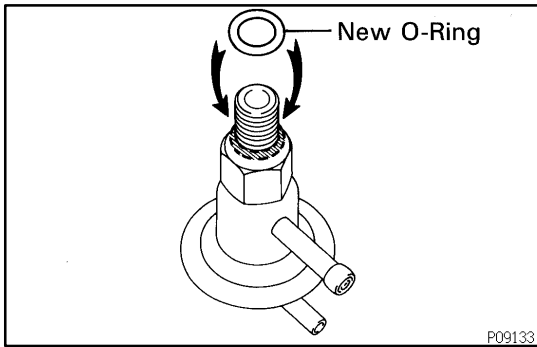

INSTALLATION

1. INSTALL FUEL PRESSURE REGULATOR

- Fully loosen the lock nut on the pressure regulator.
- Apply a light coat of gasoline to a new O-ring, and install it to the pressure regulator.
- Insert the pressure regulator into the delivery pipe by hand completely.

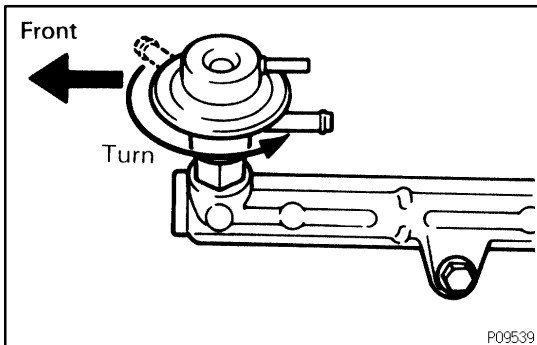

- Turn the pressure regulator counterclockwise until the fuel outlet port faces in the direction indicated in the illustration.
- Tighten the lock nut.

Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)

- CONNECT FUEL RETURN HOSE TO FUEL PRESSURE REGULATOR**
- CONNECT VACUUM SENSING HOSE TO FUEL PRESSURE REGULATOR**
- START ENGINE AND CHECK FOR FUEL LEAKAGE**