


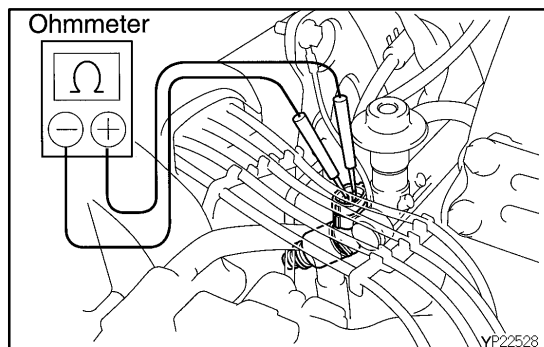

SF00R-05

INJECTOR

ON-VEHICLE INSPECTION

1. REMOVE THROTTLE BODY (See page [SF-45](#))
2. INSPECT INJECTOR RESISTANCE
 - (a) Disconnect the 6 injector connectors.
 - (b) Using an ohmmeter, measure the resistance between the terminals.
Resistance: 13.4 - 14.2 Ω at 20° C (68° F)
 If the resistance is not as specified, replace the injector.
 - (c) Reconnect the 6 injector connectors.
3. REINSTALL THROTTLE BODY (See page [SF-48](#))