

REPLACEMENT

In the following cases, replace the wire harness or connector.

- If any part of the SRS wire harness or any connector has been found to be faulty in troubleshooting.
- If any part of the SRS wire harness or any connector has been found to be faulty during the check in items 2-(b) or (c).

NOTICE:

If the wire harness used in the SRS is damaged, replace the whole wire harness assembly.