

INSTALLATION

Installation is in the reverse order of removal (see page [SA-27](#)).

HINT:

- w/ differential lock:
Before installation, check differential lock operation connecting the connector of the actuator to the connector of the vehicle side.
- w/ differential lock:
Before installation, check that the sleeves on work with switching over the differential lock control switch.
After checking, lock the front differential.
- After installation, fill the differential with gear oil (See page [SA-27](#)).
- w/ differential lock:
After installation, check that the bleeder plug at the point of the bleeder tube (inside of the engine room) is not damaged or worn.